


Low Profile Air Gripper Series MHF2



Low Profile Air Gripper


Series MHF2


Height is approximately 1/3 the size of an equivalent Series MHZ2.

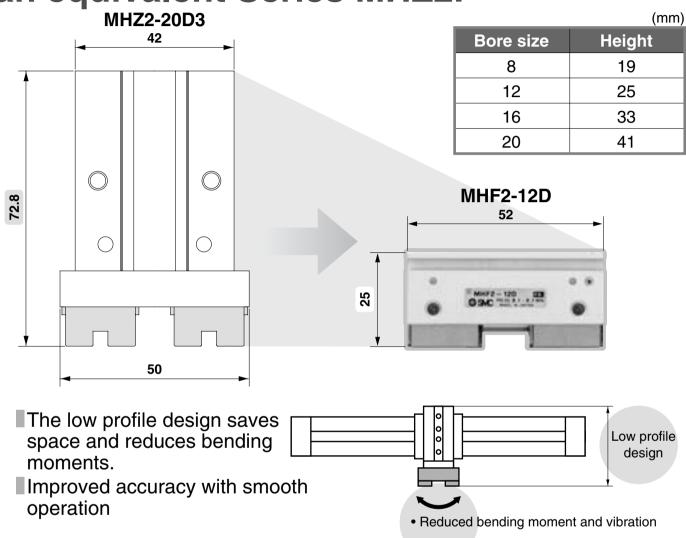

Stroke selection is available.


3 standard stroke lengths are available for each bore size. Stroke can be selected to suit the workpiece.

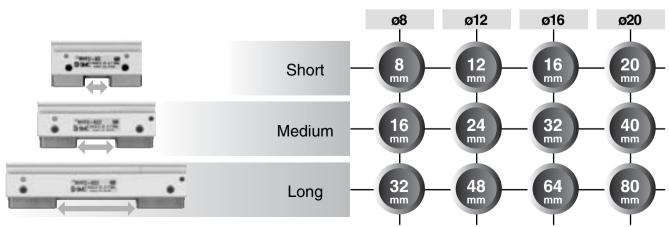


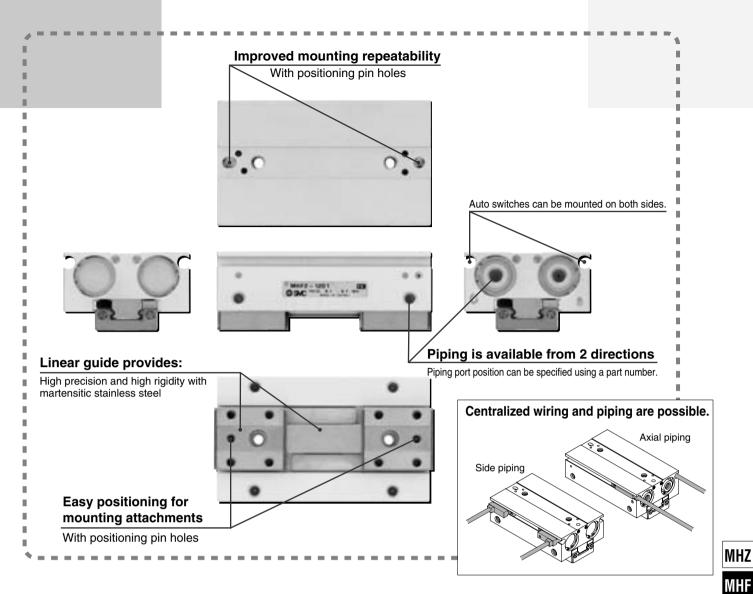

High degree of mounting flexibility


As no brackets are required, mounting height can be minimized.

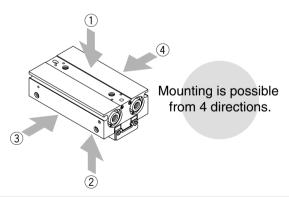

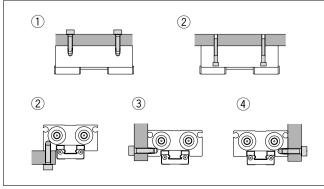

Strong gripping force

Double piston construction achieves compact design with strong gripping force.

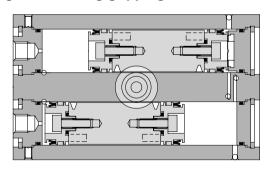

Model	Bore size	Gripping force (N)
MHF2-8D□	8	19
MHZ2-10D□	10	11
MHF2-12D□	12	48
MHZ2-20D□	20	42
MHF2-16D□	16	90
MHZ2-25D□	25	65
MHF2-20D□	20	141
MHZ2-32D□	32	158

MHL

MHR

MHK MHS

MHC

MHT

MHY


-**X**□

MRHQ


MA

Model Selection

Model Selection

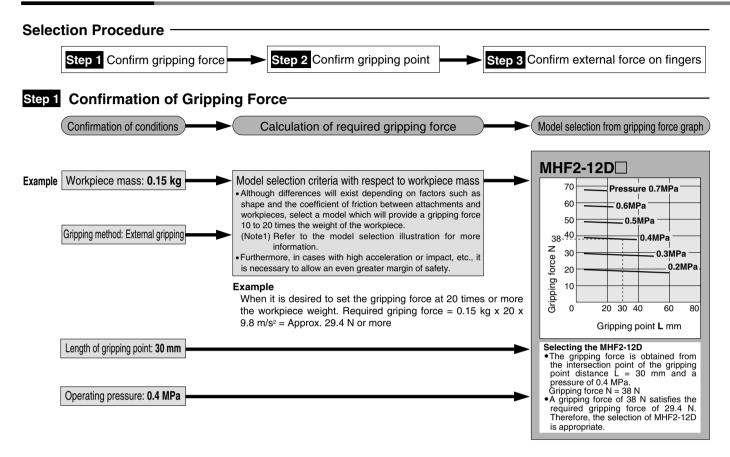

Model Selection Illustration -

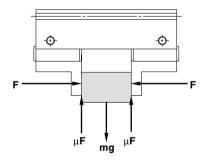

Gripping force at least 10 to 20 times the workpiece weight

The "10 to 20 times or more of the workpiece weight" recommended by SMC is calculated with the safety margin of a=4, which allows for impacts that occur during normal transportation, etc.

When μ = 0.2	When μ = 0.1
$F = \frac{mg}{2 \times 0.2} \times 4$	$F = \frac{mg}{2 \times 0.1} \times 4$
= 10 x mg	= 20 x mg
10 x workpiece weight	20 x workpiece weight

When gripping a workpiece as in the figure to the left and with the following definitions,

F: Gripping force (N)

μ: Coefficient of friction between attachments and workpiece

m: Workpiece mass (kg)

g: Gravitational acceleration (= 9.8 m/s²)

mg: Workpiece weight (N)

the conditions under which the workpiece will not drop are

$$\frac{2}{\sqrt{1}} x \mu F > mg$$

Number of fingers

and therefore,

$$\text{F} > \frac{\text{mg}}{\text{2 x } \mu}$$

With "a" as the safety margin, **F** is determined as follows:

$$F = \frac{mg}{2 x \mu} x a$$

(Note) \cdot Even in cases where the coefficient of friction is greater than $\mu = 0.2$, for safety reasons, SMC recommends selecting a gripping force which is at least 10 to 20 times the workpiece weight.


更多资料详情: WWW.SANPUM.COM


It is necessary to allow a greater safety margin for high accelerations and strong impacts, etc.


Step 1 Effective Gripping Force: Series MHF2


· Expressing the effective gripping force


The effective gripping force shown in the graphs below is expressed as F, which is the thrust of one finger when both fingers and attachments are in full contact with the workpiece as shown in the figure below.



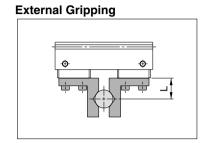


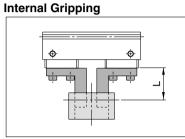


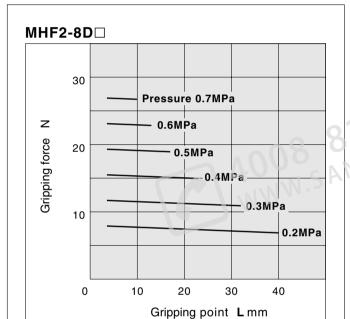

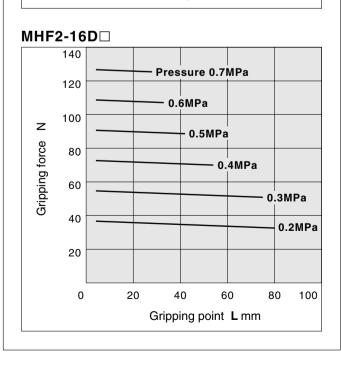

全国销售电话: 4008-824-824

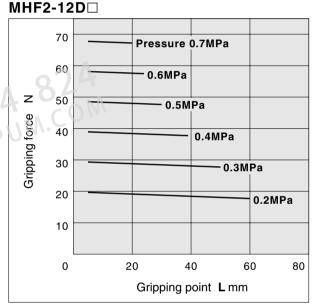

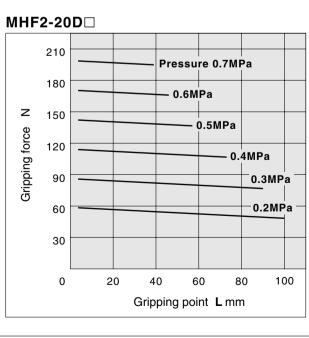

MHZ MHF

MHL

MHR MHK

MHS

MHC

MHT MHY

MHW


-X□ MRHQ


MA

Model Selection


Step 2 Effective Gripping Force: Series MHF2-


External Gripping

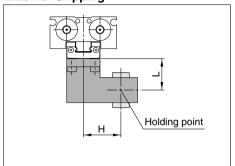


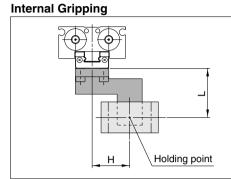


- The air gripper should be operated so that the amount of overhang "H" will stay within the range given in the graphs below.
- If the workpiece gripping point goes beyond the range limits, this will have an adverse effect on the life of the air gripper.

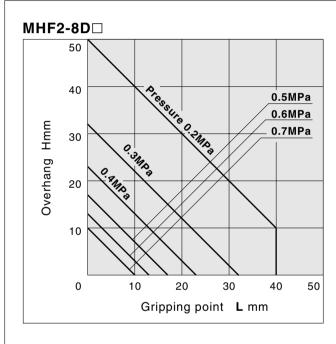


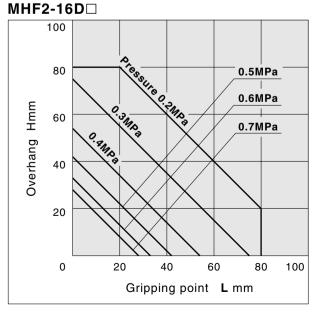

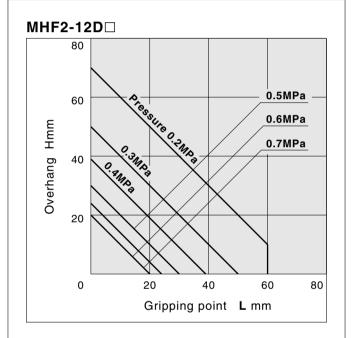

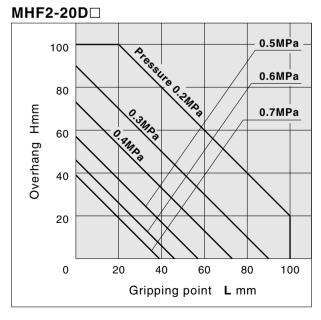

Step 3 Confirmation of External Force on Fingers: Series MHF2

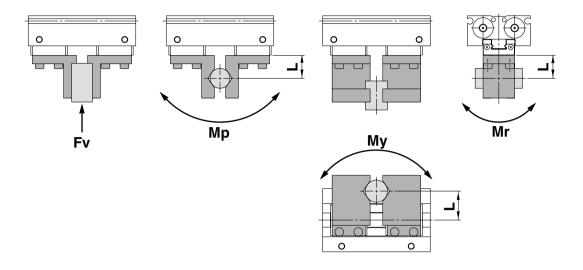

L: Distance to the point at which the load is applied (mm)

		Maximum allowable moment				
Model	Allowable vertical load Fv (N)	Pitch moment Mp (N·m)	Yaw moment My (N·m)	Roll moment Mr (N·m)		
MHF2-8D□	58	0.26	0.26	0.53		
MHF2-12D□	98	0.68	0.68	1.4		
MHF2-16D□	176	1.4	1.4	2.8		
MHF2-20D□	294	2	2	4		

Note) The load and moment values in the table indicate static values.

Calculation of allowable external force (when moment load is applied)	Calculation example
Allowable load F (N) = $\frac{M \text{ (Maximum allowable moment) (N·m)}}{\text{L x 10-3 *}}$ (* Unit converted invariable number)	When a load f = 10 N is operating, which applies pitch moment to point L = 30 mm from the end of the MHF2-12D finger. Allowable load $F = \frac{0.68}{30 \times 10^{-3}}$ = 22.7 (N) Load f = 10 (N) < 22.7 (N) Therefore, it can be used.

MHZ

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□


MRHQ

MA

Low Profile Air Gripper

Series MHF2

How to Order

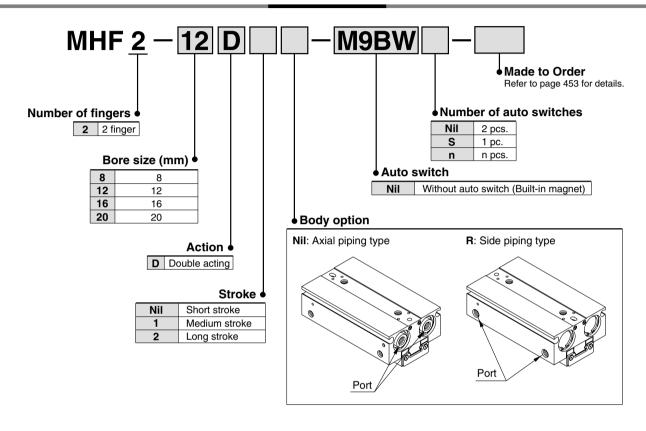

Applicable Auto Switches/Refer to pages 761 to 809 for further information on auto switches.

744	Applicable Auto Switches/heler to pages 761 to 809 for further information of auto switches.															
					I and well-are		Auto switch model		Lead wire length (m)*			m)*				
Туре	Special function	Electrical entry	dicator light	Wiring (Output)	·	_oad voltage	ð	Electrical en	try direction	0.5	1	3	5	Pre-wired connector	Applica	ble load
	10.10.10.1	Only	Ind in	(Guipui)		DC	AC	Perpendicular	In-line	(Nil)	(M)	(L)	(Z)	COMMECTOR		
٦				3-wire (NPN)		5 V, 12 V		M9NV	M9N	•	•	•	0	0	IC	
switch	_			3-wire (PNP)		5 V, 12 V		M9PV	M9P	•	•	•	0	0	circuit	
		Crommet	Yes	2-wire	24 V	12 V		M9BV	M9B	•	•	•	0	0	_	Relay,
state	Diagnostic	Grommet	res	3-wire (NPN)		5 V. 12 V	_	M9NWV	M9NW	•	•	•	0	0	IC	PLC
Solid	indication			3-wire (PNP)		5 V, 12 V		M9PWV	M9PW	•	•	•	0	0	circuit	
S	(2-color display)			2-wire		12 V		M9BWV	M9BW	•	•	•	0	0	_	

 $[\]ast$ Lead wire length symbols: 0.5 m $\cdots\cdots$ Nil (Example) M9NW

1 m ····· M (Example) M9NWM


3 m ····· L (Example) M9NWL

5 m ····· Z (Example) M9NWZ

Note 1) Take note of hysteresis with 2-color indication type switches. When using, refer to page 471 for auto switch hysteresis.

 \ast Auto switches marked with "O" are made to order specification.

Low Profile Air Gripper Series MHF2

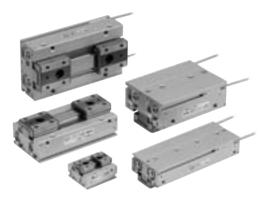

Specifications

Fluid		Air	
Q		ø8: 0.15 to 0.7 MPa	
Operating pre	essure	ø12 to 20: 0.1 to 0.7 MPa	
Ambient and	fluid temperature	-10 to 60°C (with no condensation)	
Repeatability		±0.05 mm Note 1)	
Maximum	Short stroke	120 c.p.m.	
operating	Medium stroke	120 c.p.m.	
frequency	Long stroke	60 c.p.m.	
Lubrication		Not required	
Action		Double acting	
Auto switch (Option) Note 2)	Solid state auto switch (3-wire, 2-wire)	

Note 1) This is the value when no offset load is applied to the finger.

When an offset load is applied to the finger, the maximum value is ± 0.15 mm due to the influence of backlash of the rack and pinion.

Note 2) Refer to pages 761 to 809 for further information on auto switches.

Model

Action	Model	Cylinder bore	Gripping force Effective gripping force per finger N	Opening /closing stroke	Note 2)	Unobstructed capacity (cm³)	
		(mm)		(Both sides) mm	(g)	Finger open side	Finger close side
	MHF2-8D			8	65	0.7	0.6
	MHF2-8D1	8	19	16	85	1.1	1.0
	MHF2-8D2			32	120	2.0	1.9
	MHF2-12D			12	155	1.9	1.6
	MHF2-12D1	12	48	24	190	3.3	3.0
Double	MHF2-12D2			48	275	6.1	5.8
acting	MHF2-16D			16	350	4.9	4.1
	MHF2-16D1	16	90	32	445	8.2	7.4
MHF2-16D2			64	650	14.9	14.0	
	MHF2-20D			20	645	8.7	7.3
	MHF2-20D1	20	141	40	850	15.1	13.7
	MHF2-20D2			80	1,225	28.0	26.6

Note 1) At the pressure of 0.5 MPa, when gripping point L is 20 mm. Note 2) Excluding the auto switch mass.



Made to Order Refer to pages 683 to 713 for details.

Symbol	Specifications/Description	
-X4	Heat resistance (100°C)	
-X5	Fluororubber seal	
-X50	Without magnet	
-X53	EPDM seal/Fluorine grease	
-X63	Fluorine grease	
-X79	Grease for food	

MHZ

MHF MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□ MRHQ

MA


D-□


JIS Symbol




Construction


MHF2-8D, MHF2-8D1

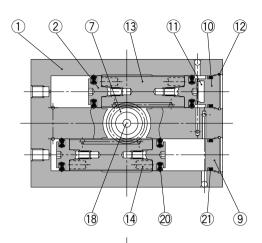

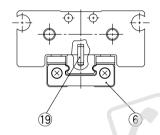



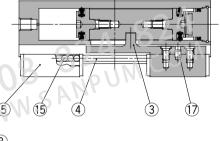

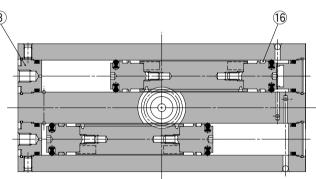

Component Parts

No.	Description	Material	Note					
1	Body	Aluminium alloy	Hard anodized					
2	Piston	Stainless steel						
3	Joint	Stainless steel	Heat treatment					
4	Guide rail	Stainless steel	Heat treatment					
5	Finger	Stainless steel	Heat treatment					
6	Roller stopper	Stainless steel						
7	Pinion	Carbon steel	Nitriding					
8	Cap A	Aluminium alloy	Clear anodized					
9	Сар В	Aluminium alloy	Clear anodized					
10	Cap C	Aluminium alloy	Clear anodized					

Component Parts

No.	Description	Material	Note				
11	Head damper	Urethane rubber					
12	Clip	Stainless steel wire					
13	Rack	Stainless steel	Nitriding				
14	Magnet	_	Nickel plated				
15	Steel balls	High carbon chromium bearing steel					
16	Wear ring	Synthetic resin					
17	Roller	High carbon chromium bearing steel					
18	Needle roller	High carbon chromium bearing steel					
19	Parallel pin	Stainless steel					
20	Piston seal	NBR					
21	Gasket	NBR					

Replacement Parts

Description		Kit no.	Contents	
Description	MHF2-8D	MHF2-8D1 MHF2-8D2		
Seal kit	MHF8-PS	MHF8-PS	MHF8-PS-2	12, 20, 21
Finger assembly	MHF-A0802	MHF-A0802-1	MHF-A0802-2	3, 4, 5, 6, 15, 17, 19 Mounting screw

Replacement part/Grease pack part no.:

Guide unit: GR-S-005 (5g) Cylinder unit: GR-L-005 (5g)


Bolts for Body Through-hole Mounting


Part no.	Number of pieces			
	MHF2-8D	2 pieces/unit		
MHF-B08	MHF2-8D1	2 pieces/unit		
	MHF2-8D2	4 pieces/unit		


^{*} The bolts for body through-hole mounting are attached to the product. They are also provided at an order of 1 piece or more with the above part numbers.

Construction

MHF2-12D □ to 20D □

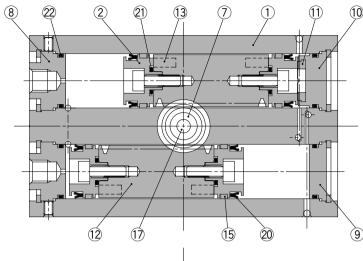

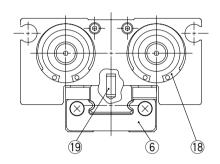

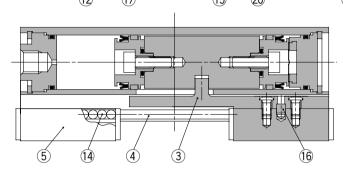

Component Parts

No.	Description	Material	Note
1	Body	Aluminium alloy	Hard anodized
2	Piston	Aluminium alloy	Clear anodized
3	Joint	Stainless steel	Heat treatment
4	Guide rail	Stainless steel	Heat treatment
5	Finger	Stainless steel	Heat treatment
6	Roller stopper	Stainless steel	
7	Pinion	Carbon steel	Nitriding
8	Cap A	Aluminium alloy	Clear anodized
9	Сар В	Aluminium alloy	Clear anodized
10	Cap C	Aluminium alloy	Clear anodized
11	Head damper	Urethane rubber	
12	Rack	Stainless steel	Nitriding

No.	Description	Material	Note
13	Magnet	_	Nickel plated
14	Steel balls	High carbon chromium bearing steel	
15	Wear ring	Synthetic resin	
16	ø12: Roller	High carbon chromium bearing steel	
10	ø16 to 20: Parallel pin	Stainless steel	
17	Needle roller	High carbon chromium bearing steel	
18	ø12: R shape retaining ring	Carbon steel	Nickel plated
10	ø16 to 20: Type C retaining ring	Carbon steel	Mickel plated
19	Parallel pin	Stainless steel	
20	Piston seal	NBR	
21	Gasket	NBR	
22	Gasket	NBR	

Replacement Parts

Description		Kit no.		Contents	
Description	MHF2-12D	MHF2-12D1	MHF2-12D2	Contents	
Seal kit	MHF12-PS	MHF12-PS	MHF12-PS	20, 21, 22	
Finger assembly	MHF-A1202	MHF-A1202-1	MHF-A1202-2	3, 4, 5, 6, 14, 16, 19 Mounting screw	
Description		Kit no.		Contents	
Description	MHF2-16D	MHF2-16D1	MHF2-16D2		
Seal kit	MHF16-PS	MHF16-PS	MHF16-PS	20, 21, 22	
Finger assembly	MHF-A1602	MHF-A1602-1	MHF-A1602-2	3, 4, 5, 6, 14, 16, 19 Mounting screw	
Description		Kit no.		Contents	
Description	MHF2-20D	MHF2-20D1	MHF2-20D2		
Seal kit	MHF20-PS	MHF20-PS	MHF20-PS	20, 21, 22	
Finger assembly	MHF-A2002	MHF-A2002-1	MHF-A2002-2	3, 4, 5, 6, 14, 16, 19 Mounting screw	

Bolts for Body Through-hole Mounting

Part no.	Number of pieces				
	MHF2-12D	2 pieces/unit			
MHF-B12	MHF2-12D1	2 pieces/unit			
	MHF2-12D2	4 pieces/unit			

- * The bolts for body through-hole mounting are attached to the product. They are also provided at an order of 1 piece or more with the above part numbers.
- * When mounting MHF2-16D□ or MHF2-20D□ with the body through-holes, use hexagon socket head screws available on the market.

Replacement part/Grease pack part no.:

MHF2- □□ D, D1 (ø12, 16, 20)	GR-S-005 (5 g) (Guide unit)
MHF2-□□D2 (ø12)	GR-L-005 (5 g) (Cylinder unit)
MHF2- □□ D2 (ø16, 20)	GR-S-005 (5 g) (Guide unit)
	GR-L-010 (10 g) (Cylinder unit)

SANPUM 455

更多资料详情: WWW.SANPUM.COM

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW


-X□

MRHQ

MA


Dimensions

MHF2-8D

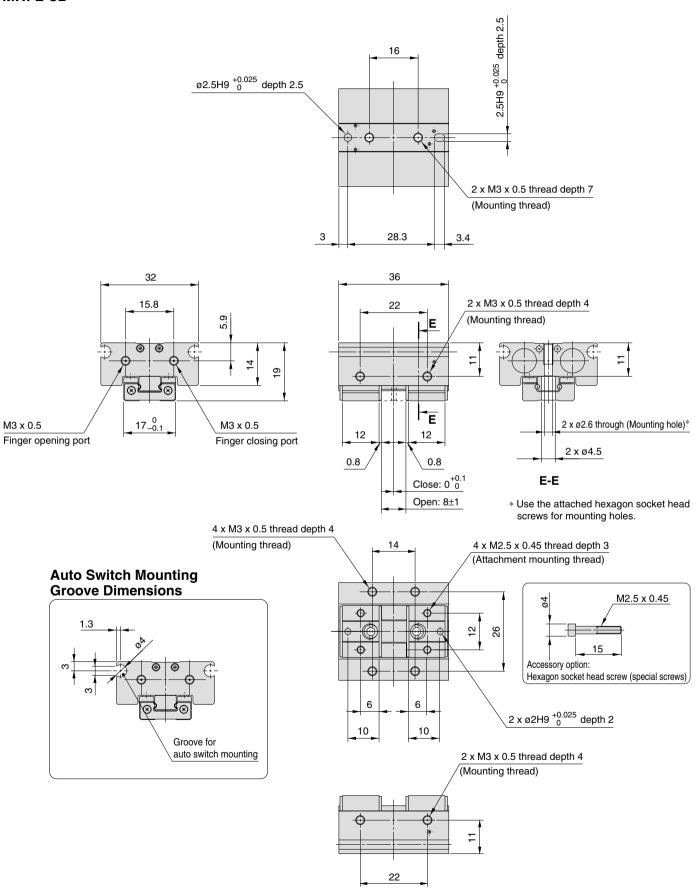


更多资料详情: WWW.SANPUM.COM


MHF2-8D1

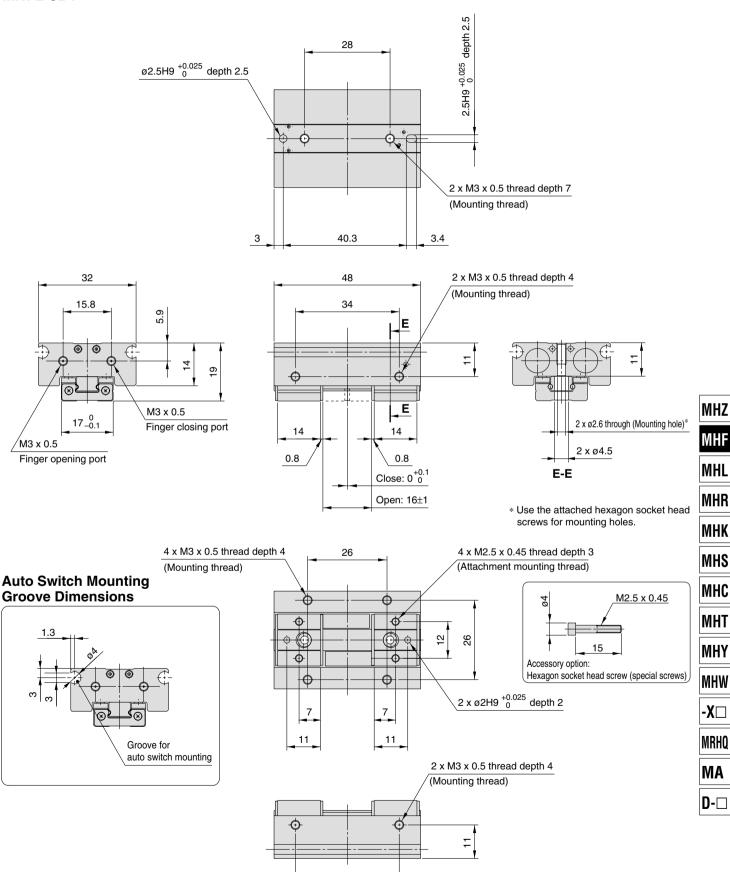


Dimensions

MHF2-8D2

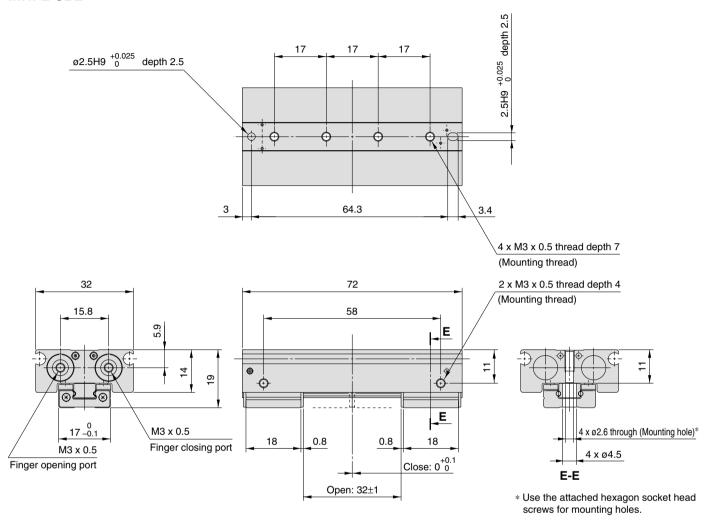

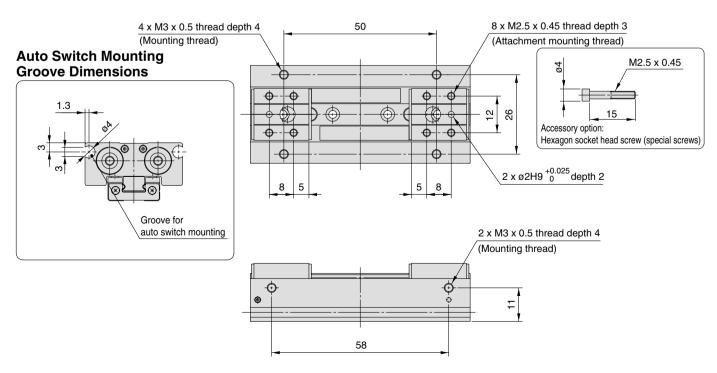


MHF2-12D

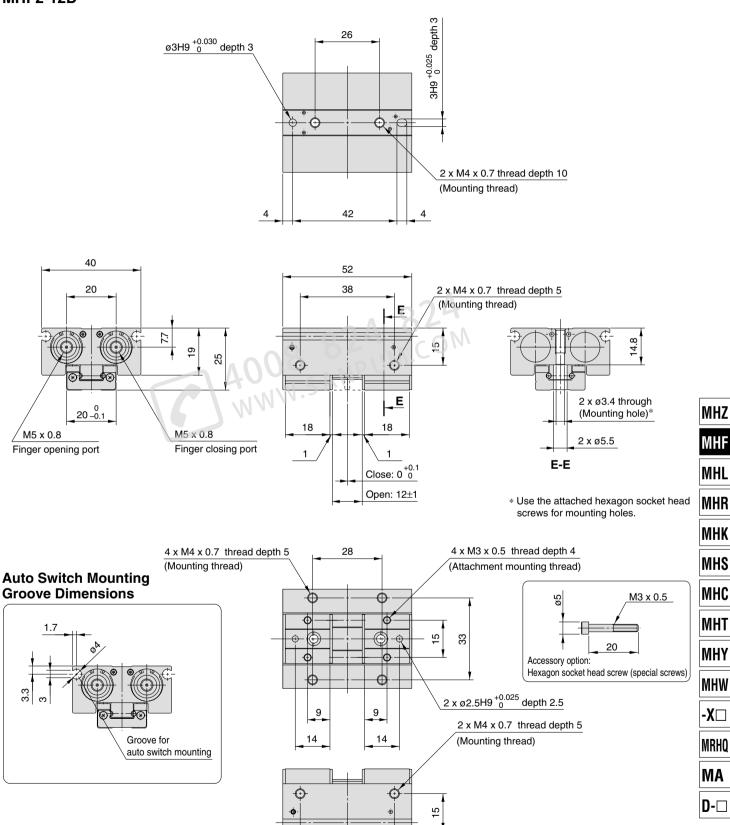


38

Dimensions


MHF2-12D1

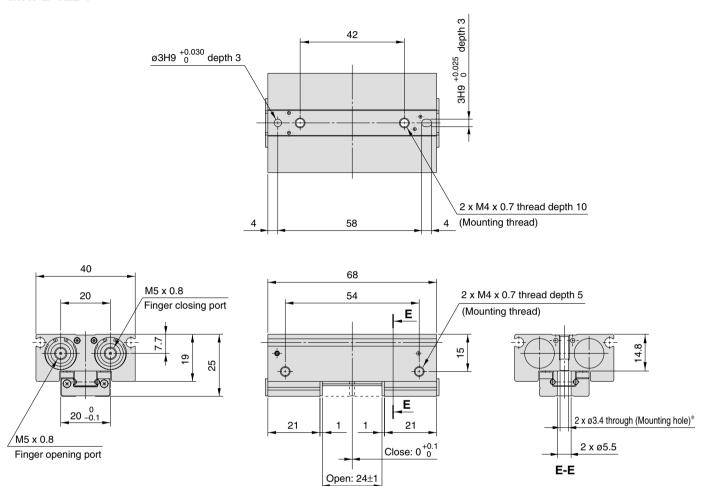

* Use the attached hexagon socket head screws for mounting holes.

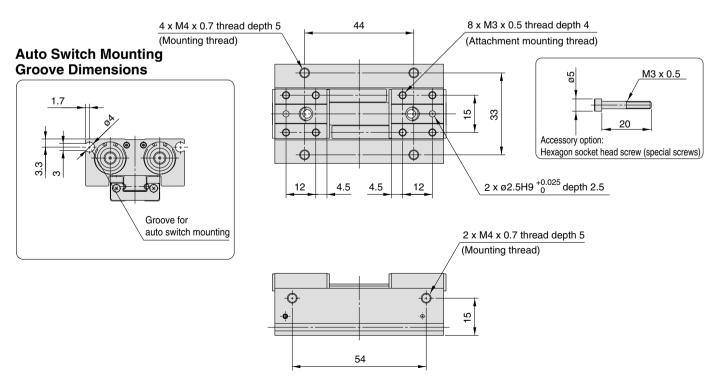


MHF2-12D2

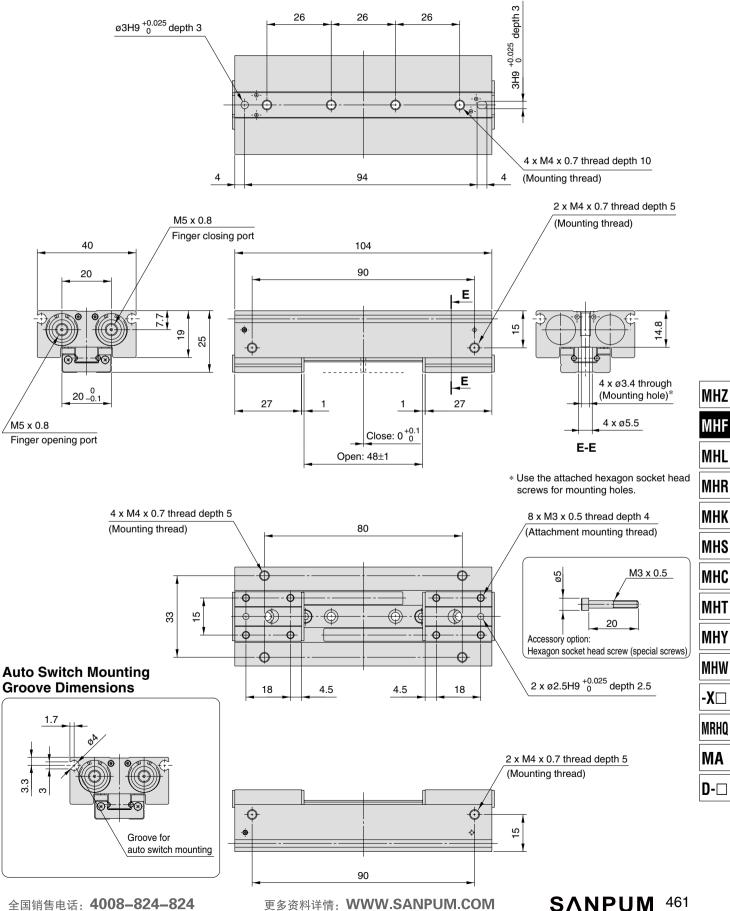


SANPUM 461


Dimensions

MHF2-16D

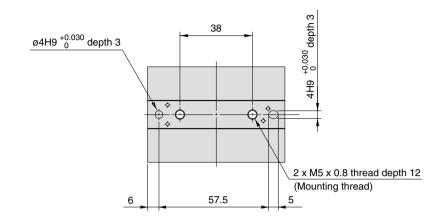


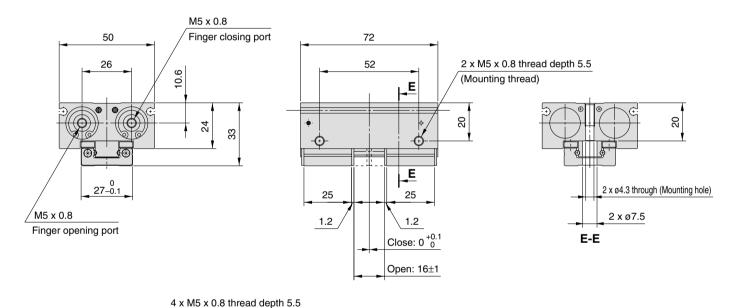


Auto Switch Mounting Groove Dimensions

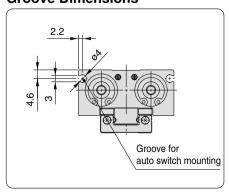



(Mounting thread)

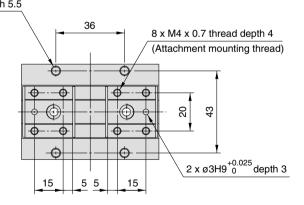


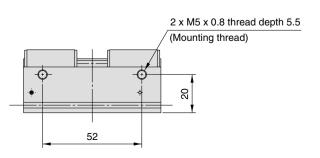

MHF2-16D1

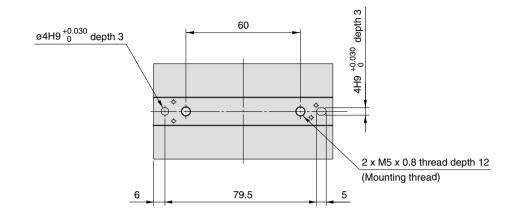

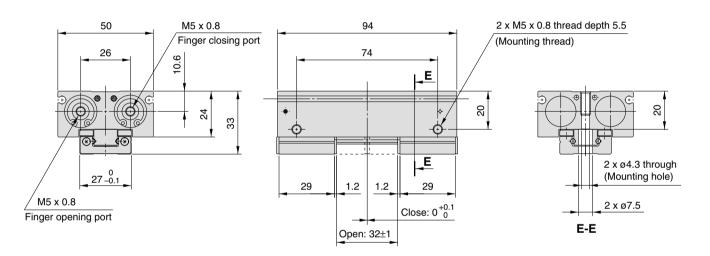

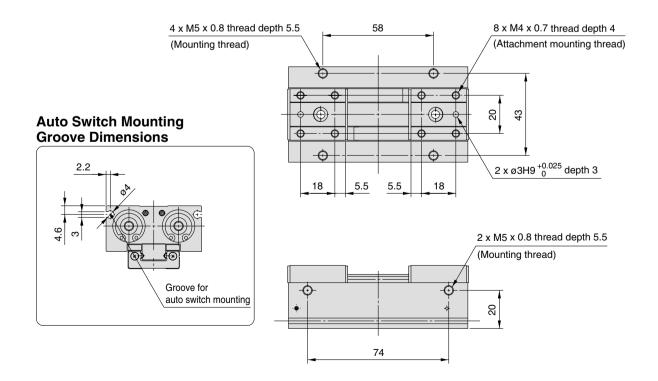

MHZ

MHL

MHR

МНК

MHS

MHC

MHY

MHW


-X□


MRHQ


MA

Dimensions


MHF2-16D2

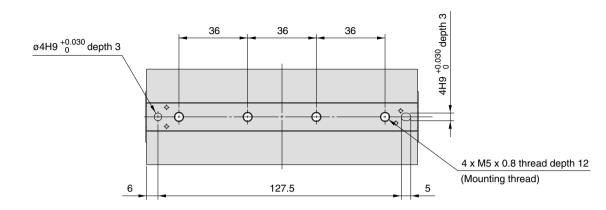

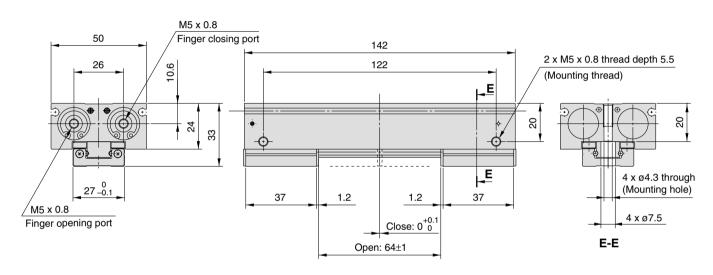

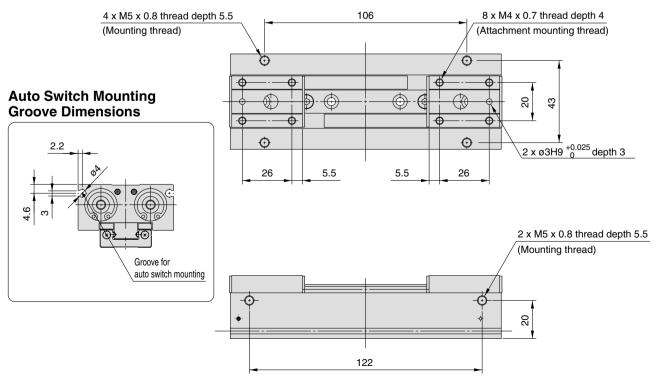

MHF2-20D

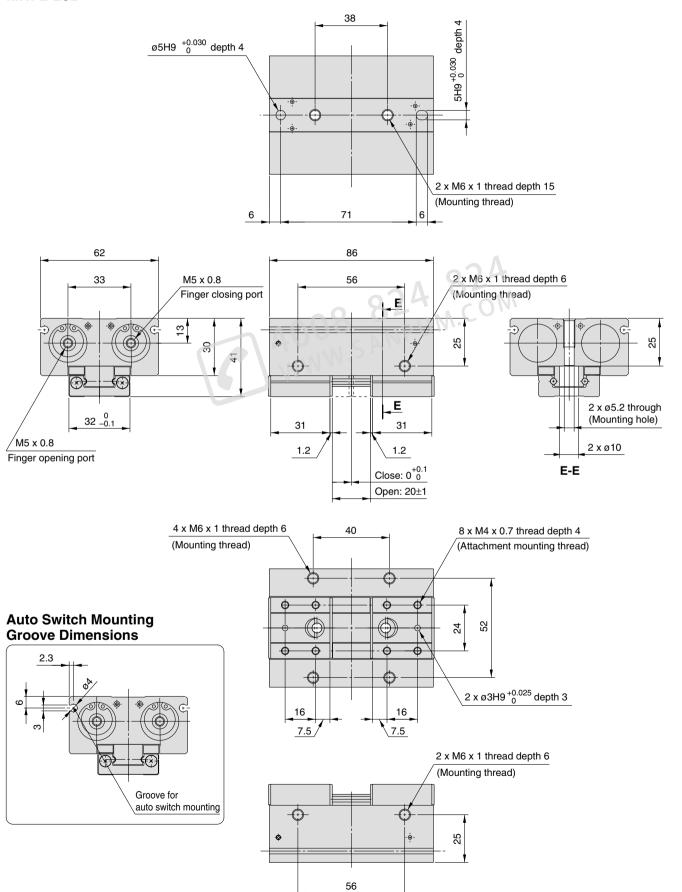

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW


-X□

MRHQ


MA

Dimensions

MHF2-20D1

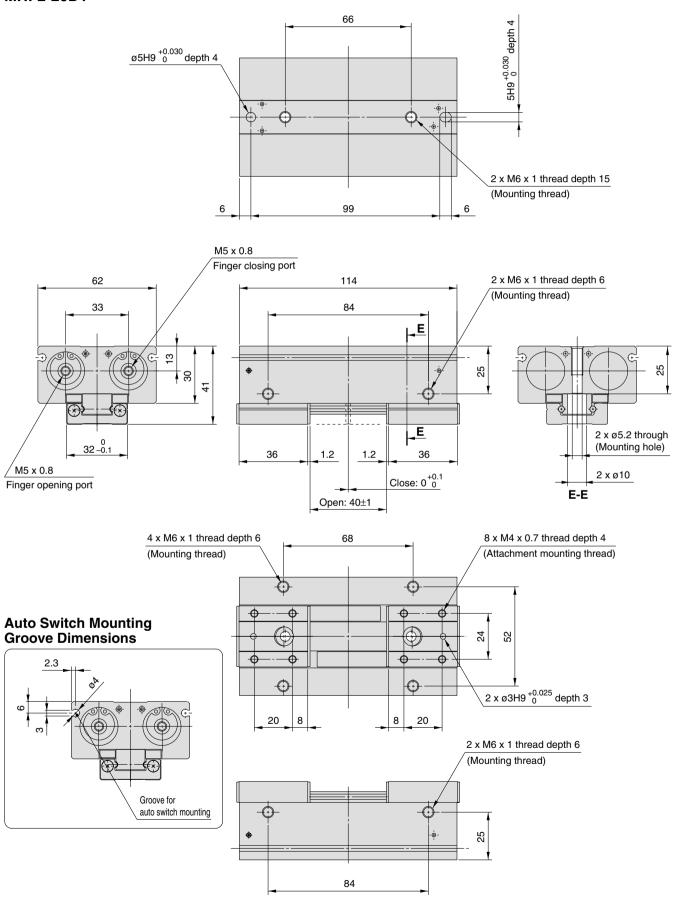


MHF2-20D2

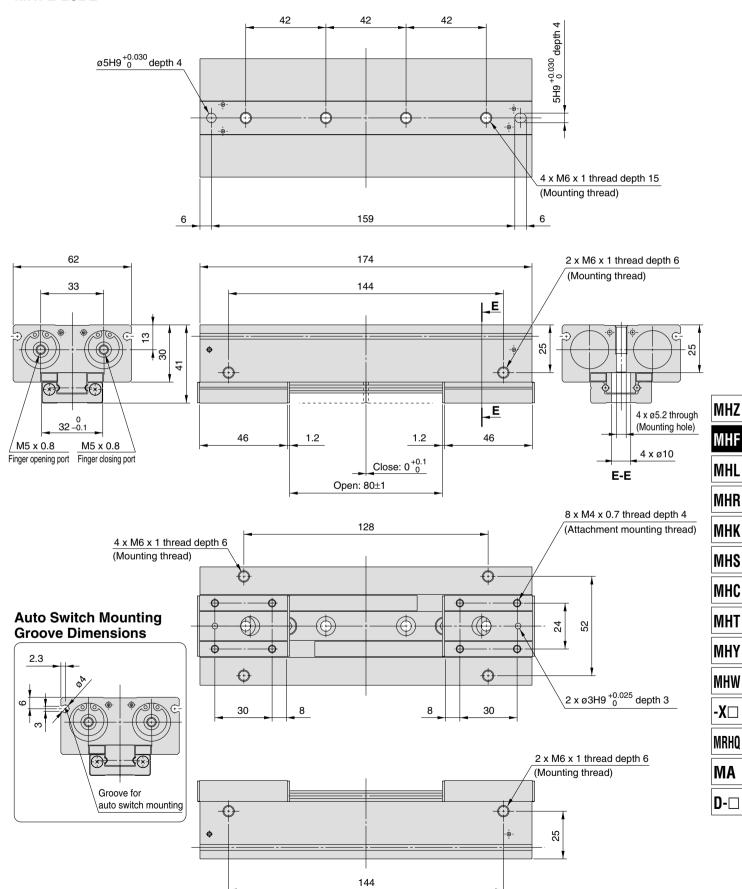

Body Option: Side Piping Type

MHF2-□D□R

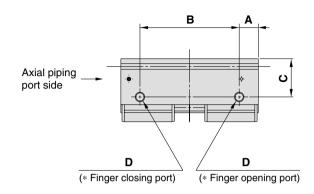

st For dimensions not given above, please refer to the table of dimensions on pages 456 to 467.


Body Option D	imensior	1		(mm)
Model	Α	В	С	D
MHF2-8DR		25		
MHF2-8D1R	5.5	37	11	M3 x 0.5
MHF2-8D2R		61		
MHF2-12DR		38		
MHF2-12D1R	7	54	14.8	M5 x 0.8
MHF2-12D2R		90		
MHF2-16DR		54		
MHF2-16D1R	9	76	19	M5 x 0.8
MHF2-16D2R		124		
MHF2-20DR		66		
MHF2-20D1R	10	94	23	M5 x 0.8
MHF2-20D2R		154		

更多资料详情: WWW.SANPUM.COM 全国销售电话: 4008-824-824

Series MHF2 Auto Switch Installation Examples and Mounting Positions

Various auto switch applications are possible through different combinations of auto switch quantities and detecting positions.

1) Detection when Gripping Exterior of Workpiece

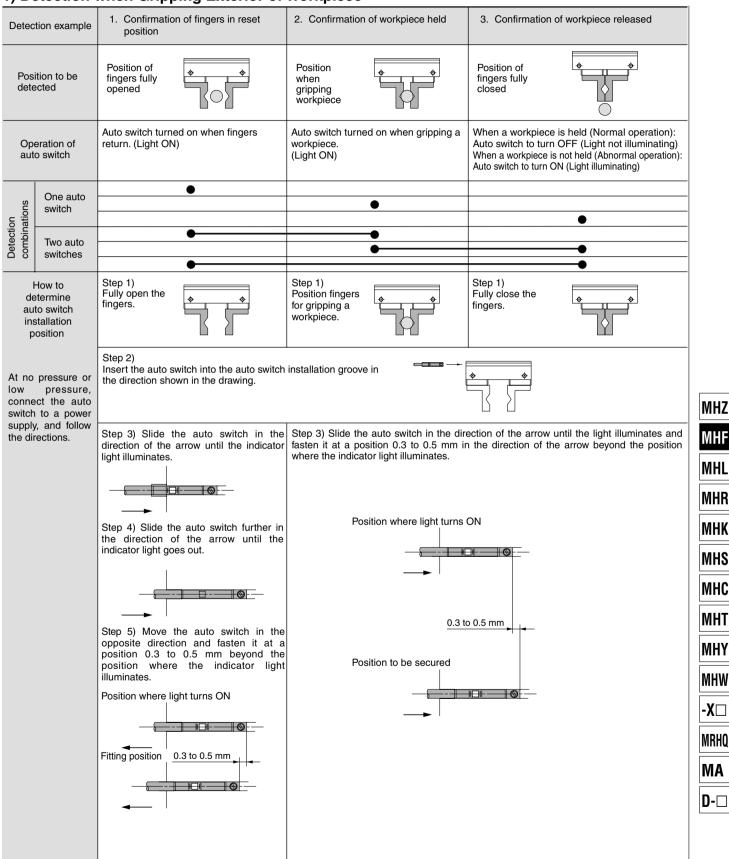

Note 1) It is recommended that gripping of a workpiece be performed close to the center of the finger stroke.

Note 2) When holding a workpiece close at the end of open/close stroke of fingers, detecting performance of the combinations listed in the above table may be limited, depending on the hysteresis of an auto switch, etc.

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ


MA

|D-□

Series MHF2 Auto Switch Installation Examples and Mounting Positions

Various auto switch applications are possible through different combinations of auto switch quantities and detecting positions.

2) Detection when Gripping Interior of Workpiece

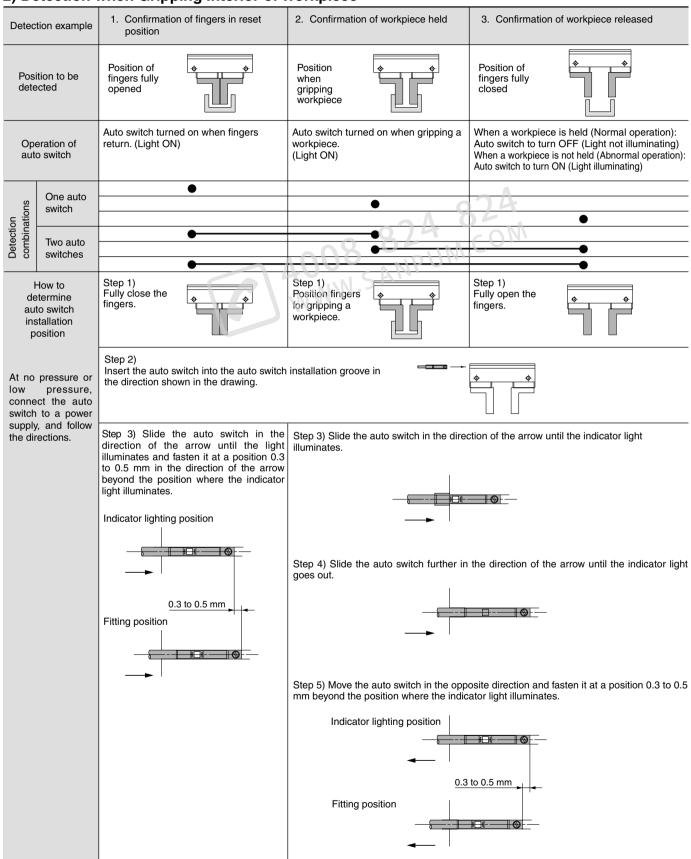


Note 1) It is recommended that gripping of a workpiece be performed close to the center of the finger stroke.

Note 2) When holding a workpiece close at the end of open/close stroke of fingers, detecting performance of the combinations listed in the above table may be limited, depending on the hysteresis of an auto switch, etc.

Auto Switch Hysteresis

Auto switches have hysteresis similar to micro switches. Use the table below as a guide when adjusting auto switch positions.

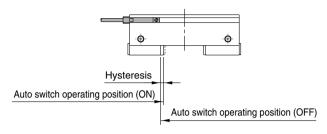


Hysteresis

,			
	D MOGOO	D-M9□W(V)	
	D-M9□(V)	Red ON	Green ON
MHF2-8D□	0.2	0.2	0.4
MHF2-12D□	0.3	0.3	0.6
MHF2-16D□	0.2	0.2	0.4
MHF2-20D□	0.5	0.5	1.0

Auto Switch Mounting

Insert the auto switch into the auto switch mounting groove in the air chuck in the direction shown below, and after setting the mounting position, tighten the attached switch mounting screw with a flat head watchmaker's screwdriver.

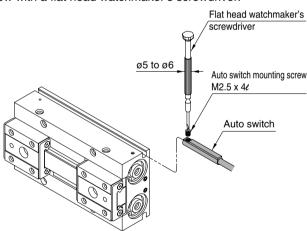


Note) Use a watchmaker's screwdriver with a grip diameter of 5 to 6 mm to tighten the auto switch mounting screw. The tightening torque should be about 0.05 to 0.15 N·m.

⚠ Caution

When using an auto switch on the mounting plate side, the switch will protrude from the end face as shown below. Please provide a run off space of 2 mm or more on the mounting plate.

全国销售电话: 4008-824-824

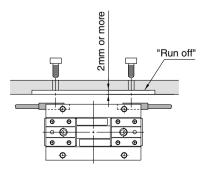

Protrusion of Auto Switch from Edge of Body

- The amount of auto switch protrusion from the body end surface is shown in the table below.
- Use this as a standard when mounting, etc.

Protrusion of Auto switch

Lead w	rire type	In-line entry	Perpendicular entry
Illustration Ritio Surition Cingology Constitution Model		L	L
Model	Rition	D-M9□ D-M9□W	D-M9□V D-M9□WV
MHF2-8D	Open	6.5	4.5
IVITIFZ-OD	Close	6.5	4.5
MHF2-8D1	Open	6.5	4.5
MILLE-9D1	Close	6.5	4.5
MHF2-8D2	Open	0.5	_
WITIFZ-ODZ	Close	0.5	_
MHF2-12D	Open	3	1
WITIF2-12D	Close	3	1
MHF2-12D1	Open	1	
MULE - 12D1	Close	1	_
MHF2-12D2	Open		
WITIF2-12D2	Close		
MHF2-16D	Open		_
MILLE-10D	Close		_
MHF2-16D1	Open		<u> </u>
WII 1F2-10D1	Close	_	_
MHF2-16D2	Open	_	_
WITH Z- 10D2	Close	_	_
MHF2-20D	Open		_
WITTZ-20D	Close	_	_
MHF2-20D1	Open	_	_
WITH 2-2001	Close		_
MHF2-20D2	Open		_
WITH 12-2002	Close	_	_

Note) There is no protrusion for sections of the table with no values entered.

MHZ

MHL

MHR

MHK

MHS

MHC

MHY

MHW

-X□

MRHQ

MA





Series MHF2 Specific Product Precautions

Be sure to read before handling.

Mounting


⚠ Warning

- 1. Do not scratch or dent the air gripper by dropping or bumping it when mounting.
 - Slight deformation can cause inaccuracy or a malfunction.
- 2. Tighten the screw within the specified torque range when mounting the attachment.

Tightening with a torque above the limit can cause malfunction, while insufficient tightening can cause slippage and dropping.

How to Mount Attachment to the Finger

Make sure to mount the attachments on fingers with the tightening torque in the table below by using bolts, etc., for the female threads on fingers.

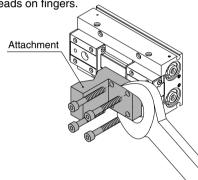


Model	Bolt	Max. tightening torque N⋅m
MHF2-8D□	M2.5 x 0.45	0.36
MHF2-12D□	M3 x 0.5	0.63
MHF2-16D□	M4 x 0.7	1.5
MHF2-20D□	M4 x 0.7	1.5

3. Tighten the screw within the specified torque range when mounting the air gripper.

Tightening with a torque above the limit can cause malfunction, while insufficient tightening can cause slippage and dropping.

How to Mount Air Grippers

Top mounting (Body tapped)



Model	Bolt	Max. tightening torque N⋅m	Max. screw-in depth ℓ mm
MHF2-8D	M3 x 0.5	0.95	7
MHF2-12D	M4 x 0.7	2.2	10
MHF2-16D	M5 x 0.8	4.5	12
MHF2-20D	M6 x 1	7.8	15


Lateral mounting (Body tapped)



Model	Bolt	Max. tightening torque N⋅m	Max. screw-in depth ℓ mm
MHF2-8D	M3 x 0.5	0.63	4
MHF2-12D	M4 x 0.7	1.5	5
MHF2-16D	M5 x 0.8	3	5.5
MHF2-20D	M6 x 1	5.2	6


Bottom mounting (Body tapped, body through-hole)

Body tapped



Model	Bolt	Max. tightening torque N·m	Max. screw-in depth ℓ mm
MHF2-8D	M3 x 0.5	0.63	4
MHF2-12D	M4 x 0.7	1.5	5
MHF2-16D	M5 x 0.8	3	5.5
MHF2-20D	M6 x 1	5.2	6

Body through-hole



Model	Bolt	Max. tightening torque N⋅m	Screw-in depth ℓ mm
MHF2-8D	M2.5 x 0.45*	0.36	4
MHF2-12D	M3 x 0.5*	0.63	5.2
MHF2-16D	M4 x 0.7	1.5	_
MHF2-20D	M5 x 0.8	3	_

* When MHF2-8D□ and MHF2-12D□ are mounted body through-hole, use the attached special bolts.

Operating Environment

⚠ Caution

Use caution for the anti-corrosiveness of the linear guide section.

Martensitic stainless steel is used for the finger guide rail, so make sure that anti-corrosiveness is inferior to the austenitic stainless steel. In particular, watch for rust in environments where waterdrops are likely to adhere due to condensation.

SANPUM

为高端制造业提供一流的工业产品

SANPUM

深圳市三浦贸易有限公司

地址:深圳市南山区南海大道海王大厦A座19E

电话: 86-755-23881000 传真: 86-755-23881777 邮箱: info@sanpum.com

