




Rotary Gripper

Series MRHQ

Gripper Inside Diameter/Size: $\varnothing 10$, $\varnothing 16$, $\varnothing 20$, $\varnothing 25$

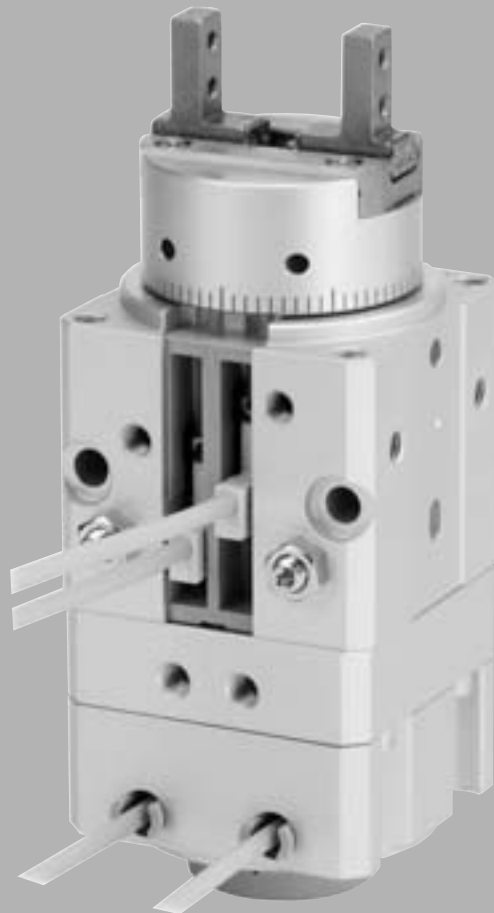


Series MRHQ Model Selection

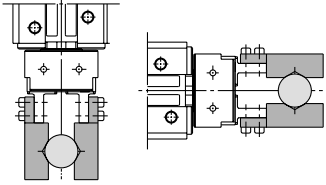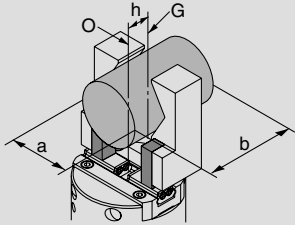
Procedure	Calculation	Example
<p>1 Operating conditions</p> <p>Enumerate the operating conditions according to the mounting position and workpiece configuration.</p>  <p>Vertical mounting Horizontal mounting</p>	<ul style="list-style-type: none"> • Model used • Operating pressure • Mounting position • Rotation time t (s) • Overhang H (mm) • Gripping point distance L (mm) • Distance between central axis and center of gravity h (mm) • Load mass m_1 (kg) • Mass of 2 attachments m_2 (kg) 	 <p>Rotary gripper: MRHQ16D-90S Pressure: 0.4 MPa Mounting position: Horizontal Rotation time (t): 0.2 s/90° Overhang (H): 10 mm Gripping point distance (L): 20 mm Distance between central axis and center of gravity (h): 10 mm Load mass (m_1): 0.07 kg Mass of 2 attachments (m_2): 0.05 kg</p>
<p>2 Rotation time</p> <p>Confirm that it is within the adjustable rotation time range.</p>	<p>0.07 to 0.3 s/90°</p>	<p>0.2 s/90° OK</p>
<p>3 Overhang and gripping point distance</p> <p>Confirm that the overhang (H) and the gripping point distance (L) are within the operating pressure range limit.</p>	<p>Gripping point range limit Graph (1)</p>	<p>Within the range limit OK</p>
<p>4 Load mass</p> <p>Confirm that the load converted from the load mass is less than 1/20 of the effective gripping force. (A greater margin must be allowed if large impacts will be applied when work pieces are transported.)</p>	<p>$20 \times 9.8 \times m_1$ $<$ Effective gripping force (N) Graph (2)</p>	<p>$20 \times 9.8 \times 0.07 = 13.72$ $13.72 \text{ N} <$ Effective gripping force OK</p>
<p>5 External force on finger</p> <p>Make sure that the vertical load and each moment on finger are within allowable value.</p>	<p>Less than allowable value (Refer to page 721 for the lateral load allowable value and each moment value)</p>	<p>Downward vertical load by load and attachment: $f = (0.07 + 2 \times 0.05) \times 9.8 = 1.67 \text{ (N)} <$ Vertical allowable value OK</p>
<p>Rotational torque (horizontal mounting only)</p>		
<p>6</p> <p>Convert the weight of the load and attachments (2 pcs.) into a load value and multiply by the overhang (H). Confirm that this value is less than 1/20 of the effective torque.</p>	<p>$20 \times 9.8 \times (m_1 + m_2) \times H/1000$ $<$ Effective torque (N·m) Graph (3)</p>	<p>$20 \times 9.8 \times (0.07 + 0.05) \times 10/1000 = 0.24$ $0.24 \text{ N·m} <$ Effective torque OK</p>
<p>7 Find the moment of inertia, "I_R" for the load + attachments (2 pcs.)</p>	<p>$I_R = K \times (a^2 + b^2 + 12h^2) \times (m_1 + m_2)/(12 \times 10^6)$ (K = 2: Safety factor)</p>	<p>$I_R = 2 \times (20^2 + 30^2 + 12 \times 10^2) \times (0.07 + 0.05)/(12 \times 10^6)$ $= 0.00005 \text{ kg·m}^2$</p>
<p>8 Kinetic energy</p> <p>Confirm that the kinetic energy of the load + attachments (2 pcs.) is no more than the allowable value.</p> <p>{ Refer to "Moment of Inertia Calculation and Allowable Kinetic Energy". }</p>	<p>$1/2 \times I_R \times \omega^2 <$ Allowable energy (J) $\omega = 2\theta/t$ (ω: Angular speed at the end) θ: Rotation angle (rad) t: Rotation time (s)</p>	<p>$1/2 \times 0.00005 \times (2 \times (3.14/2)/0.2)^2 = 0.0062$ $0.0062 \text{ J} <$ Allowable energy OK</p>

Gripping Point

External gripping

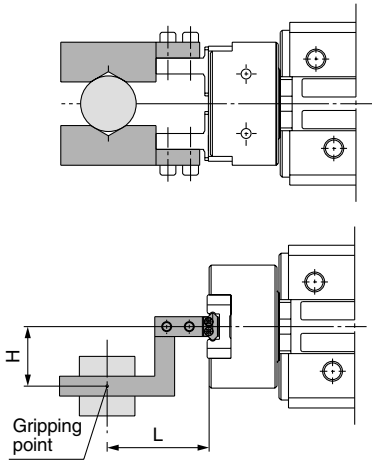

Internal gripping

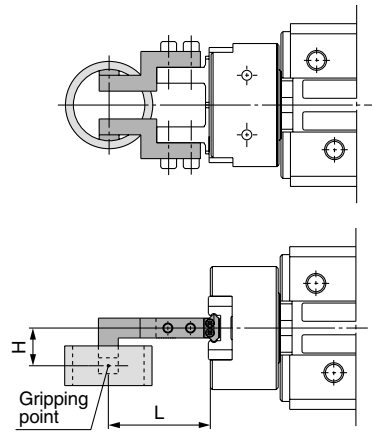

L: Gripping point distance
H: Overhang


- Operate so that the workpiece gripping point distance "L" and the amount of overhang "H" stay within the range shown for each operating pressure given in the graphs above.
- If operated with the workpiece gripping point outside of the range limit, an excessive eccentric load will be applied to the fingers and guide section, causing play in the fingers and adversely affecting the gripper's life.

Gripping Point Range Limit


Graph (1)

External Gripping


MRHQ10

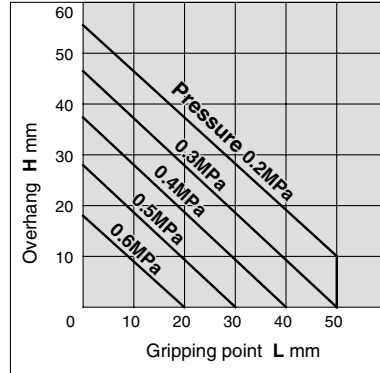


MRHQ16

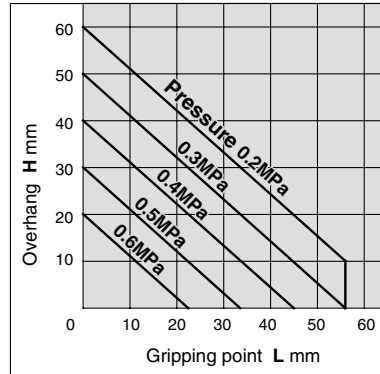

MRHQ20

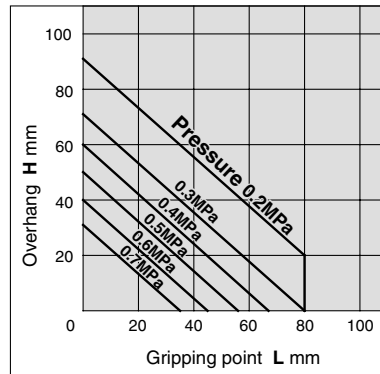


MRHQ25

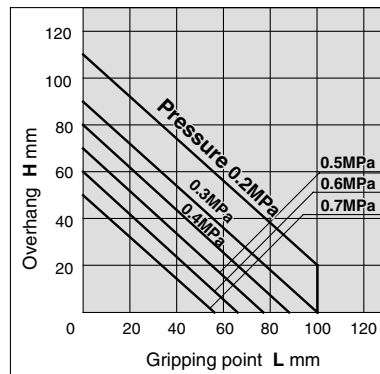


Internal Gripping


MRHQ10

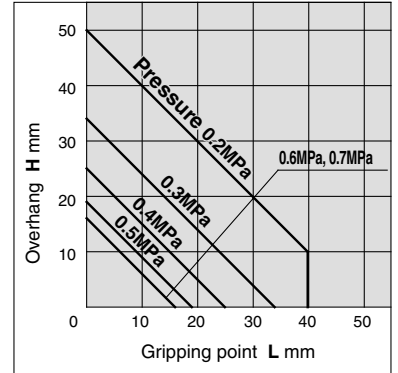


MRHQ16

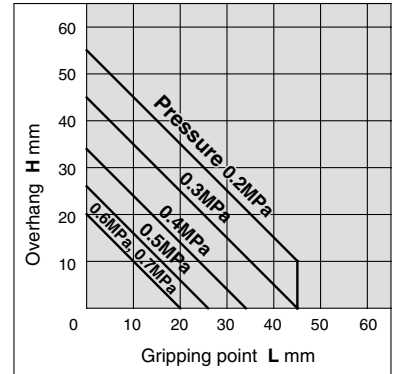

MRHQ20

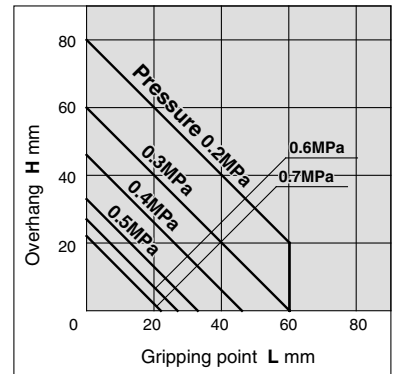

MRHQ25

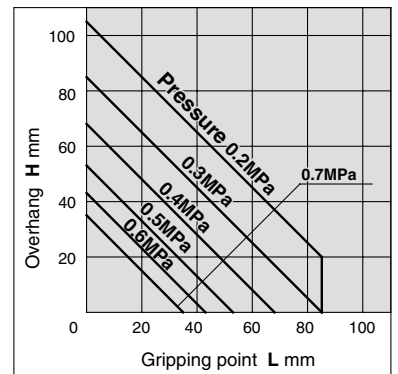

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ

MA


D-□

Series MRHQ


Effective Gripping Force

Expressing the effective gripping force


The effective gripping force shown in the graphs to the right is expressed as F, which is the impellent force of one finger, when both fingers and attachments are in full contact with the workpiece as shown in the figure below.

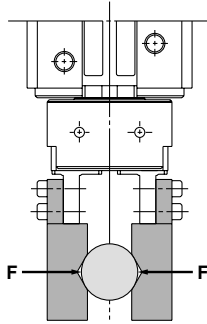

External gripping

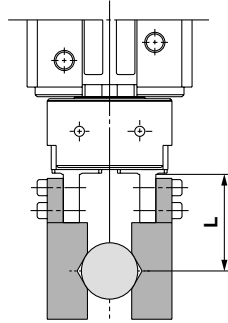

Internal gripping

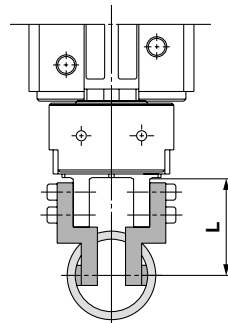

L: Gripping point distance (mm)


Model Selection Guidelines by Workpiece Mass

- Although conditions differ according to the workpiece shape and the coefficient of friction between the attachments and the workpiece, select a model that can provide a gripping force of 10 to 20 times the workpiece mass, or more.
- A greater margin of safety is required when high acceleration or impact occurs during workpiece transfer.


Effective Gripping Force

External Gripping/Double Acting


MRHQ10D

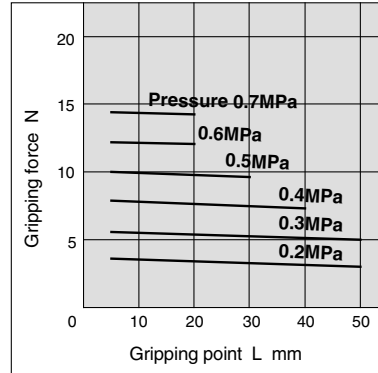


MRHQ16D

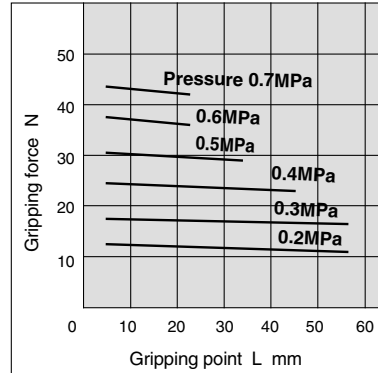

MRHQ20D

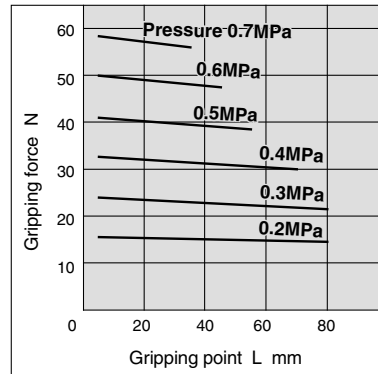


MRHQ25D

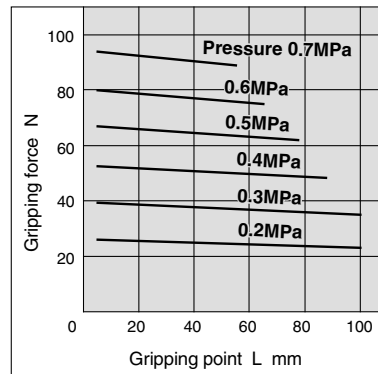


Internal Gripping/Double Acting


MRHQ10D

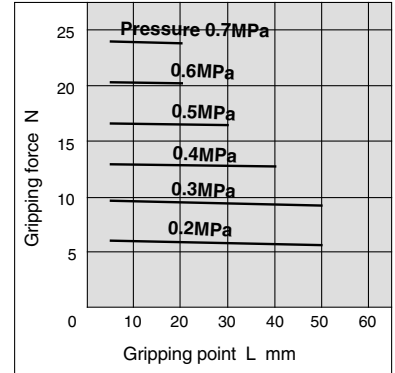


MRHQ16D

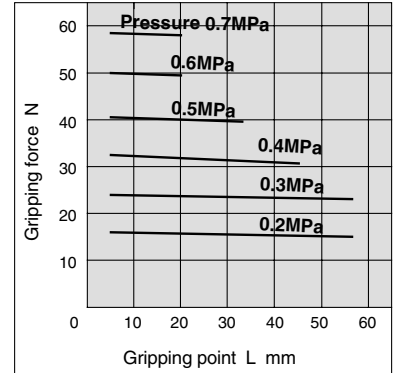

MRHQ20D

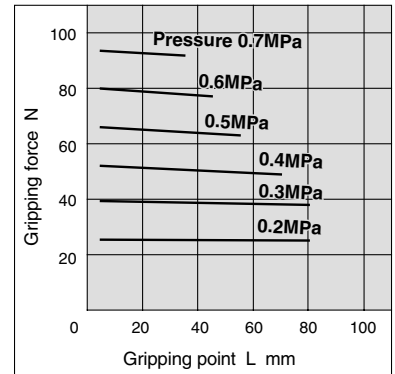


MRHQ25D

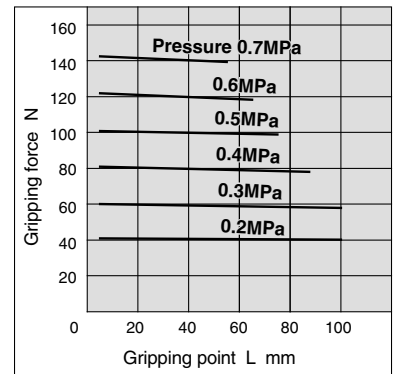


External Gripping Force/Single Acting


MRHQ10S

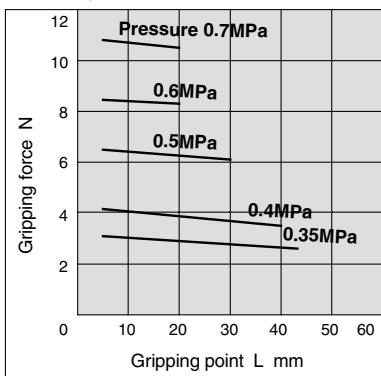


MRHQ16S

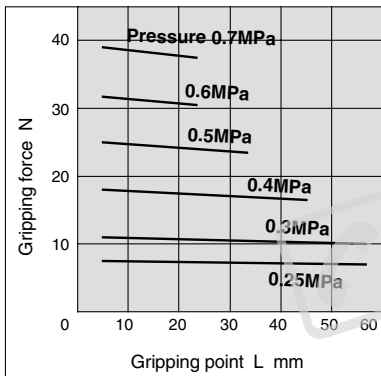

MRHQ20S

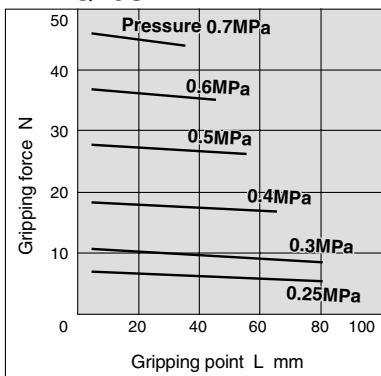


MRHQ25S

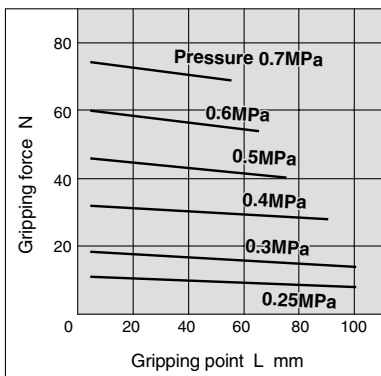


Internal Gripping Force/Single Acting


MRHQ10C

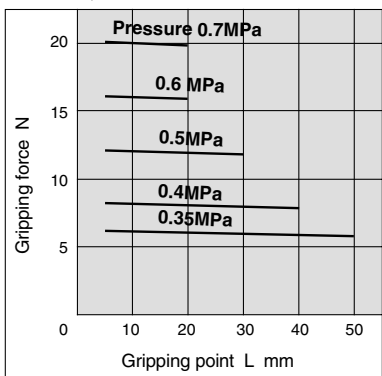


MRHQ16C

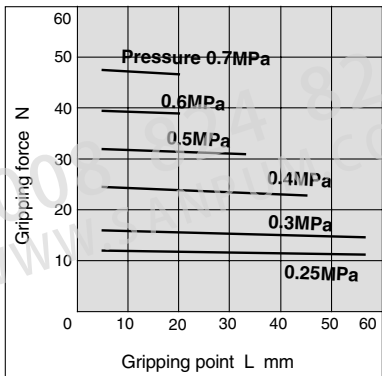

MRHQ20C

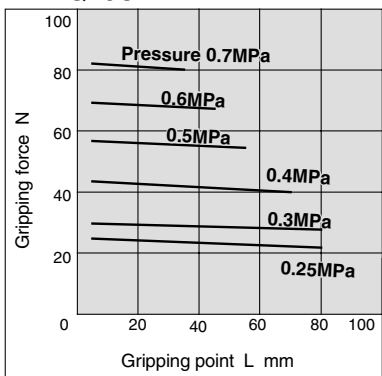

MRHQ25C

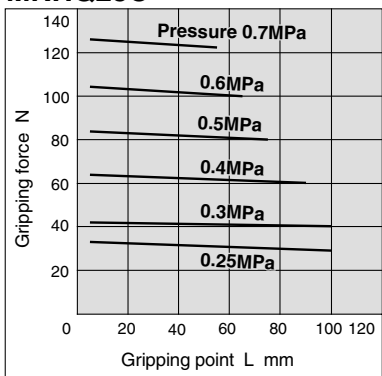



- MHZ
- MHF
- MHL
- MHR
- MHK
- MHS
- MHC
- MHT
- MHY
- MHW
- X
- MRHQ**
- MA
- D-

Series MRHQ


Rotational Torque and Gripping Point

Rotational Torque

Graph (3)

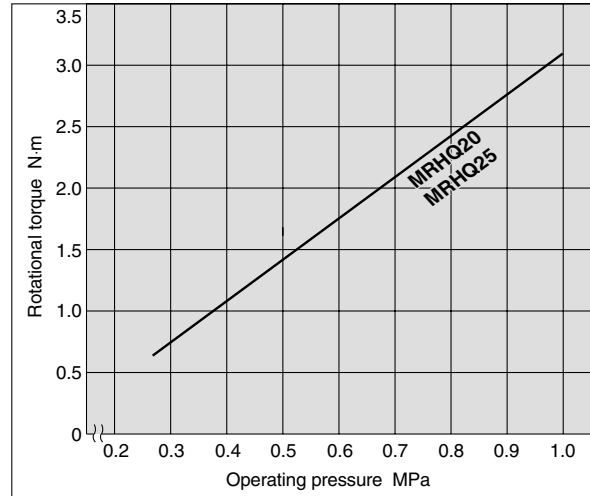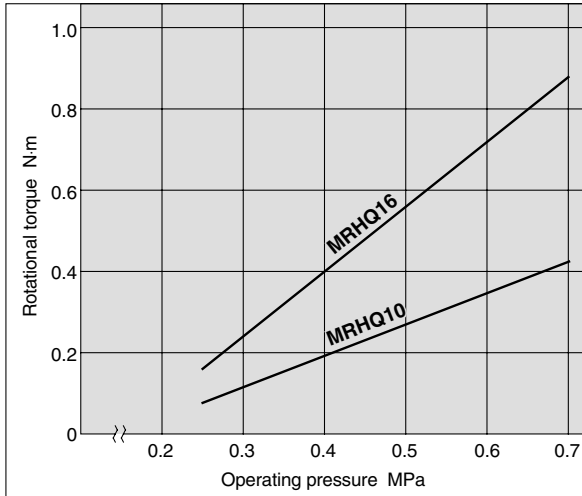


How to Mount Attachment on Fingers

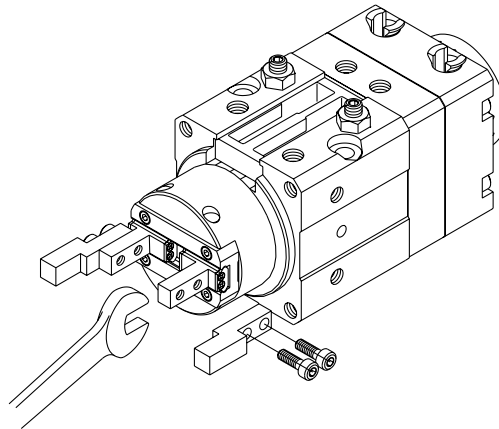

When mounting attachments on fingers, support the fingers with a tool such as a spanner to prevent them from twisting. Refer to the table on the right for the tightening torques of finger mounting bolts.

Model	Bolt	Max. tightening torque N·m
MRHQ10	M2.5 x 0.45	0.31
MRHQ16	M3 x 0.5	0.59
MRHQ20	M4 x 0.7	1.4
MRHQ25	M5 x 0.8	2.8

Allowable Value of External Force on Fingers

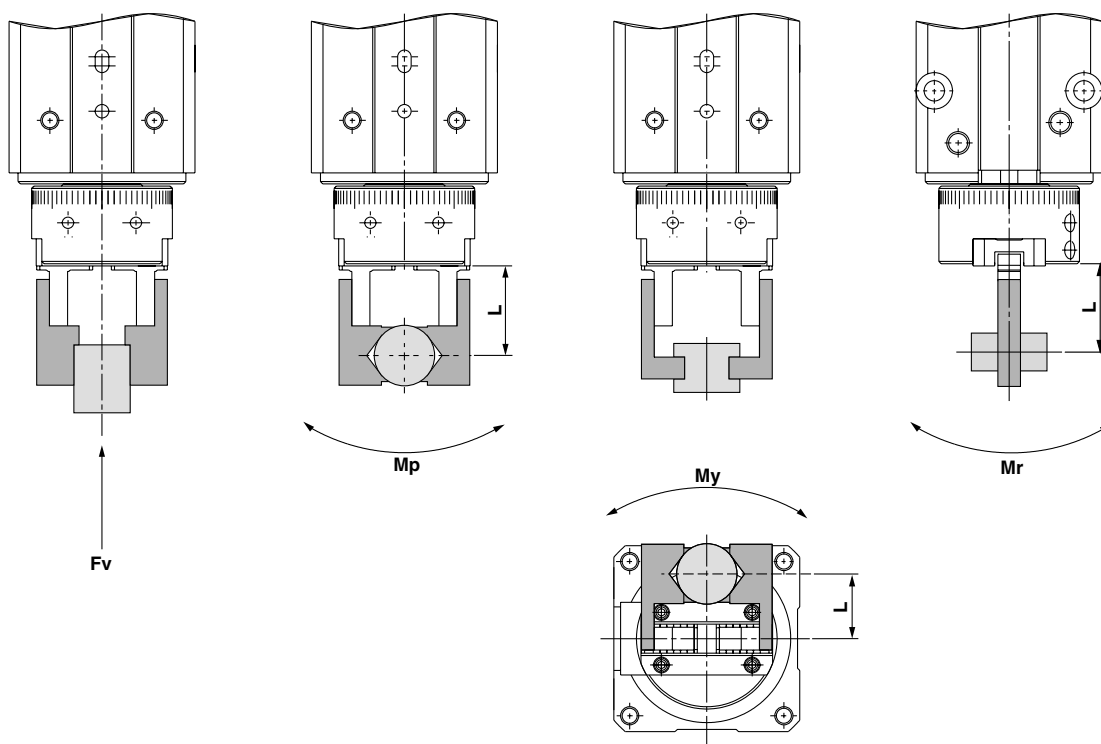

L: Distance to the point at which a load is applied (mm)

Model	Allowable vertical load F_v (N)	Maximum allowable moment		
		Pitch moment M_p (N-m)	Yaw moment M_y (N-m)	Roll moment M_r (N-m)
MRHQ10 □	58	0.26	0.26	0.53
MRHQ16 □	98	0.68	0.68	1.36
MRHQ20 □	147	1.32	1.32	2.65
MRHQ25 □	255	1.94	1.94	3.88

Note) Values of load and moment in the above table are static values.

Calculation for allowable external force (with moment load)	Calculation example
$\text{Allowable load } F \text{ (N)} = \frac{M \text{ (Maximum allowable moment) (N-m)}}{L \times 10^{-3} *}$ <p>* Unit conversion factor</p>	<p>When static load $f = 10$ N, which produces pitch moment to the point $L = 30$ mm from MRHQ16D guide, is applied. Operable condition requires that F be bigger than f.</p> <p>Example:</p> $\text{Allowable load } F = \frac{0.68}{30 \times 10^{-3}}$ $= 22.7 \text{ (N)} > 10$ <p>Since load $F > f$, it is operable.</p>

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ


MA

D-□

Moment of Inertia and Allowable Kinetic Energy

Moment of Inertia Calculation and Allowable Kinetic Energy

Calculate the moment of inertia as shown below, and confirm that the operating conditions are within the allowable kinetic energy shown in the graph "Moment of inertia and rotation time" on the right.

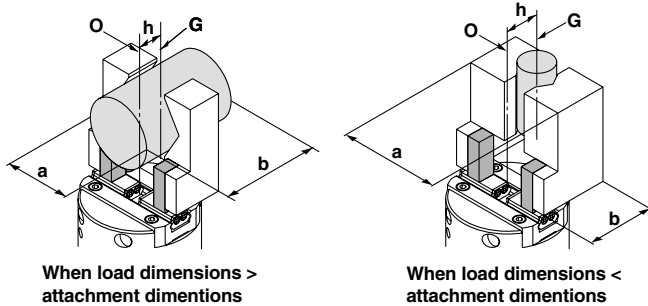

Description

O Center of rotation	 Gripper fingers
G Center of gravity of attachment and load	 Attachments
		 Load

Moment of inertia I: kg·m²

$$I = \frac{(a^2 + b^2 + 12h^2)(m_1 + m_2)}{12 \times 10^6}$$

Practical moment of inertia I_R: kg·m²

$$I_R = K \times I$$

* Use I_R for this product.

m₁: Mass of two attachments (kg)


m₂: Mass of load (kg)

h: Distance between O and G (mm)

a, b: Dimensions of load or attachment (mm)

K = 2 (Coefficient)

Graph (Moment of inertia and rotation time)

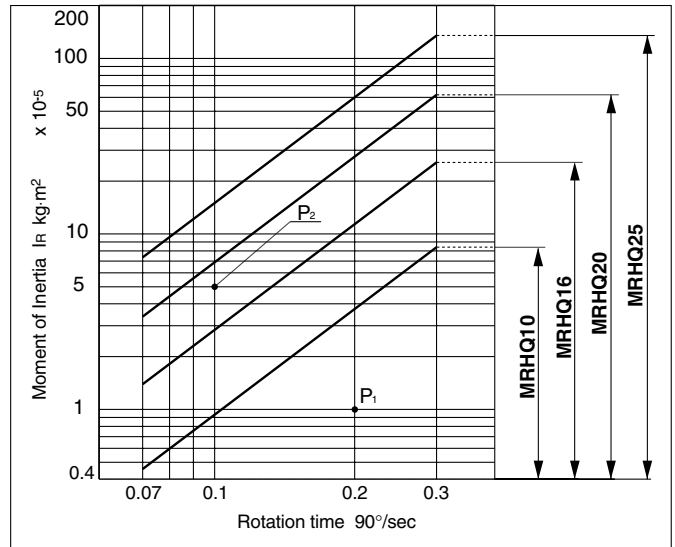

How to Use the Graph

[Example 1]

- Moment of Inertia: 1×10^{-5} kg·m²
- Rotation time: 0.3 s/90°
- To select model **MRHQ10**



It can be used because the point of intersection P₁ on the graph is within the limiting range.

[Example 2]

- Moment of Inertia: 5×10^{-5} kg·m²
- Rotation time: 0.1 s/90°
- To select model **MRHQ16**



It cannot be used because the point of intersection P₂ on the graph is outside the range limit. (Review is necessary.)

To confirm by calculation, use formula (1) on the right and check that the kinetic energy of load E is within the allowable values below.

Kinetic energy of load E: J

$$E = 1/2 \times I_R \times \omega^2 \dots (1)$$

$$\omega = 2\theta/t$$

ω: Angular speed at the end

θ: Rotating angle (rad)

t: Rotation time (s)

Allowable Kinetic Energy

Model	Allowable value J
MRHQ10□	0.0046
MRHQ16□	0.014
MRHQ20□	0.034
MRHQ25□	0.074

Rotary Gripper Series MRHQ

How to Order

MRH Q 10 D - 90 S - M9NV [] [] - M9N [] []

Lead wire length

Nil	0.5 m
L	3 m
Z	5 m

Number of auto switches

Nil	2 pcs.
S	1 pc.

Type of auto switch for detecting rotation

Nil	Without auto switch (Built-in magnet)
-----	---------------------------------------

Applicable Auto Switch

Type	Electrical entry	Indicator light	Wiring (output)	Load voltage		Auto switch symbol			Lead wire length* (m)			Applicable load		Auto switch model
				DC	Electrical entry	0.5 (Nil)	3 (L)	5 (Z)	IC	Relay PLC				
Solid state switches	Grommet	Yes	3-wire (NPN)	5V	M9N	●	●	○	IC	Relay	PLC	D-M9N□-746		
			3-wire (PNP)	12V		●	●	○					D-M9P□-746	
			2-wire	12V		●	●	○					D-M9B□-746	

* Lead wire length symbols: 0.5 m Nil (Example) M9N
3 m L M9NL
5 m Z M9NZ

* Refer to page 731 for further information on auto switches.
* Order with an auto switch part number when ordering a single auto switch unit.
* Auto switches marked with a "○" are made upon receipt of order.

Type of auto switch for gripper opening/closing

N	Without auto switch (Built-in magnet)
---	---------------------------------------

Applicable Auto Switch

Type	Electrical entry	Indicator light	Wiring (output)	Load voltage		Auto switch symbol			Lead wire length* (m)			Applicable load		Auto switch model
				DC	Electrical entry	0.5 (Nil)	3 (L)	5 (Z)	IC	Relay PLC				
Solid state switches	Grommet	Yes	3-wire (NPN)	5V	M9NV	●	●	○	IC	Relay	PLC	D-M9NV□		
			3-wire (PNP)	12V		●	●	○					D-M9PV□	
			2-wire	12V		●	●	○					D-M9BV□	

* Lead wire length symbols: 0.5 m Nil (Example) M9NV
3 m L M9NVL
5 m Z M9NVZ

* Refer to page 774 for further information on auto switches.
* Please order with an auto switch part number when ordering a single auto switch unit.
* Auto switches marked with a "○" are made upon receipt of order.

Rotary gripper

Gripper

Q	Parallel type: 2 fingers
---	--------------------------

Gripper bore

10	10 mm
16	16 mm
20	20 mm
25	25 mm

Action

D	Double acting
S	Single acting (Normally open)
C	Single acting (Normally closed)


Rotation angle

90	90°
180	180°

Single vane


Unit list

Gripper unit

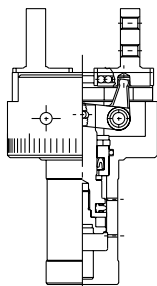

Model	Unit part no.
MRHQ10D	P407090-3D
MRHQ10S	P407090-3S
MRHQ10C	P407090-3C
MRHQ16D	P407060-3D
MRHQ16S	P407060-3S
MRHQ16C	P407060-3C
MRHQ20D	P407080-3D
MRHQ20S	P407080-3S
MRHQ20C	P407080-3C
MRHQ25D	P408080-3D
MRHQ25S	P408080-3S
MRHQ25C	P408080-3C

Switch mounting unit

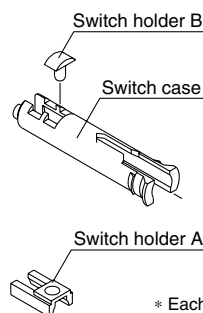

Model	Unit part no.
MRHQ10□	P407090-1
MRHQ16□	P407060-1
MRHQ20□	
MRHQ25□	

* Each unit includes two of each of the parts indicated left.
* Auto switches are not included with a unit.

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ

MA

D-□

Series MRHQ



Specifications

Model		MRHQ10	MRHQ16	MRHQ20	MRHQ25
Fluid		Air			
Operating pressure	Rotary unit	0.25 to 0.7 MPa		0.25 to 1.0 MPa	
	Gripper unit	Double acting	0.1 to 0.7 MPa		
		Single acting	0.35 to 0.7 MPa	0.25 to 0.7 MPa	
Rotation angle		90° ±10°, 180° ±10° (Both ends of vibration ±5° adjustable)			
Gripper action		Double acting, Single acting			
Finger opening/closing repeatability		±0.01mm			
Gripper maximum operating frequency		180 c.p.m			
Ambient and fluid temperature		5 to 60°C			
Adjustable rotation time range ⁽¹⁾		0.07 to 0.3 s/90° (at 0.5 MPa)			
Allowable kinetic energy		0.0046 J	0.014 J	0.034 J	0.074 J
Auto switch	Rotary unit	Solid state auto switch (2-wire, 3-wire)			
	Gripper unit	Solid state auto switch (2-wire, 3-wire)			

Note 1) Operate within the speed adjustment range, as speed control exceeding the limit value of the low speed may cause sticking or failure to operate.


Model

Action	Model	Cylinder bore (mm)	Opening/Closing stroke (mm)	Rotating angle (°)	Mass (g) ⁽¹⁾
Double acting	MRHQ10D	10	4	90	306
				180	305
	MRHQ16D	16	6	90	593
				180	591
	MRHQ20D	20	10	90	1055
				180	1052
	MRHQ25D	25	14	90	1561
				180	1555
Single acting	MRHQ10S MRHQ10C	10	4	90	307
				180	306
	MRHQ16S MRHQ16C	16	6	90	594
				180	592
	MRHQ20S MRHQ20C	20	10	90	1060
				180	1057
	MRHQ25S MRHQ25C	25	14	90	1566
				180	1560


Note 1) Values do not include auto switch mass.

Gripper Rotation Range/View from Gripper Side

- The figure at the right indicates the position of the gripper when pressure is applied to port B.
- When pressure is applied to port A, the gripper rotates clockwise.
- Both ends of vibration can be adjusted ±5° with the adjusting bolt.

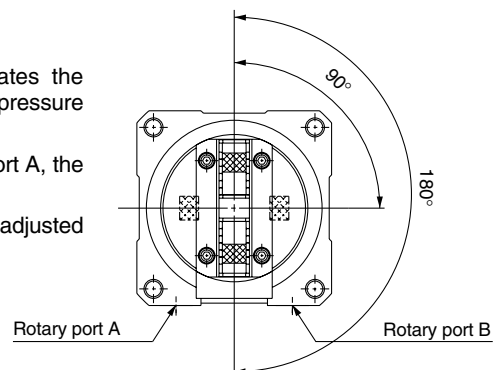

Construction

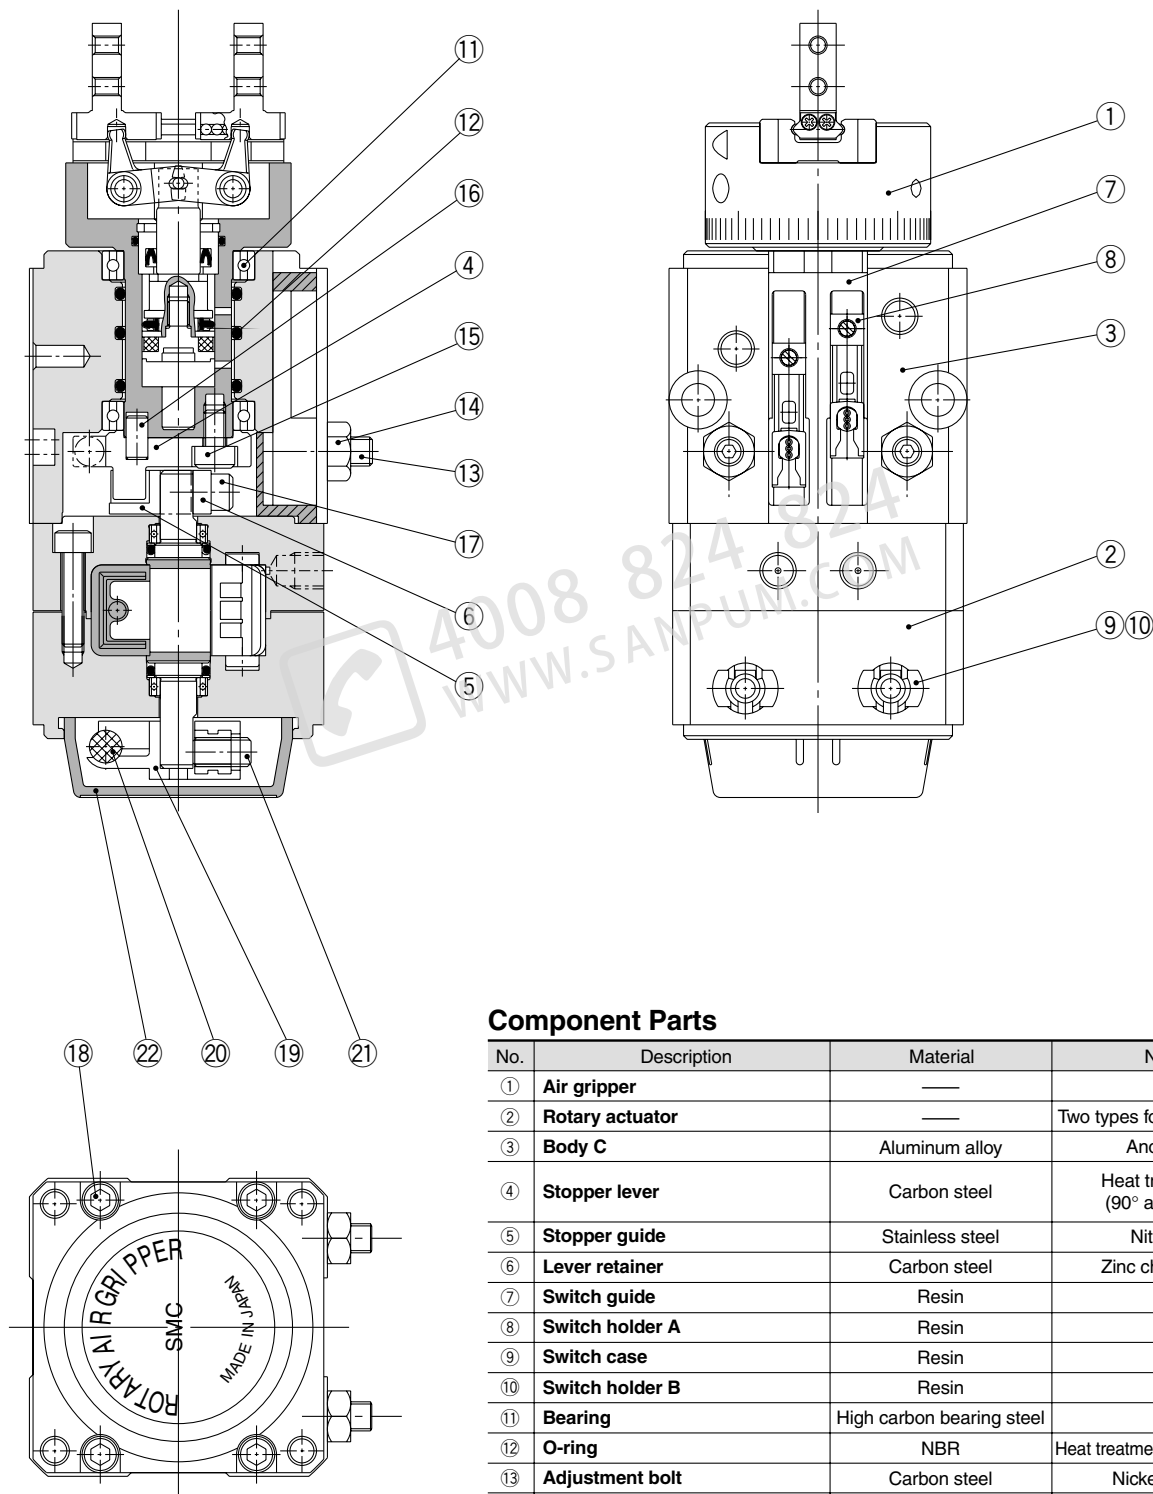

Component Parts

No.	Description	Material	Note
①	Air gripper	—	
②	Rotary actuator	—	Two types for 90° and 180°
③	Body C	Aluminum alloy	Anodized
④	Stopper lever	Carbon steel	Heat treatment (90° and 180°)
⑤	Stopper guide	Stainless steel	Nitriding
⑥	Lever retainer	Carbon steel	Zinc chromated
⑦	Switch guide	Resin	
⑧	Switch holder A	Resin	
⑨	Switch case	Resin	
⑩	Switch holder B	Resin	
⑪	Bearing	High carbon bearing steel	
⑫	O-ring	NBR	Heat treatment, Nickel plated
⑬	Adjustment bolt	Carbon steel	Nickel plated
⑭	Nut	Carbon steel	Nickel plated
⑮	Hexagon socket head cap screw	Carbon steel	
⑯	Parallel pin	Stainless steel	
⑰	Hexagon socket head cap screw	Stainless steel	
⑱	Hexagon socket head cap screw	Stainless steel	
⑲	Magnet lever	Resin	
⑳	Magnet	—	Nickel plated
㉑	Hexagon socket head set screw	Stainless steel	
㉒	Resin case	Resin	

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ


MA

D-□

Series MRHQ


Dimensions

MRHQ10

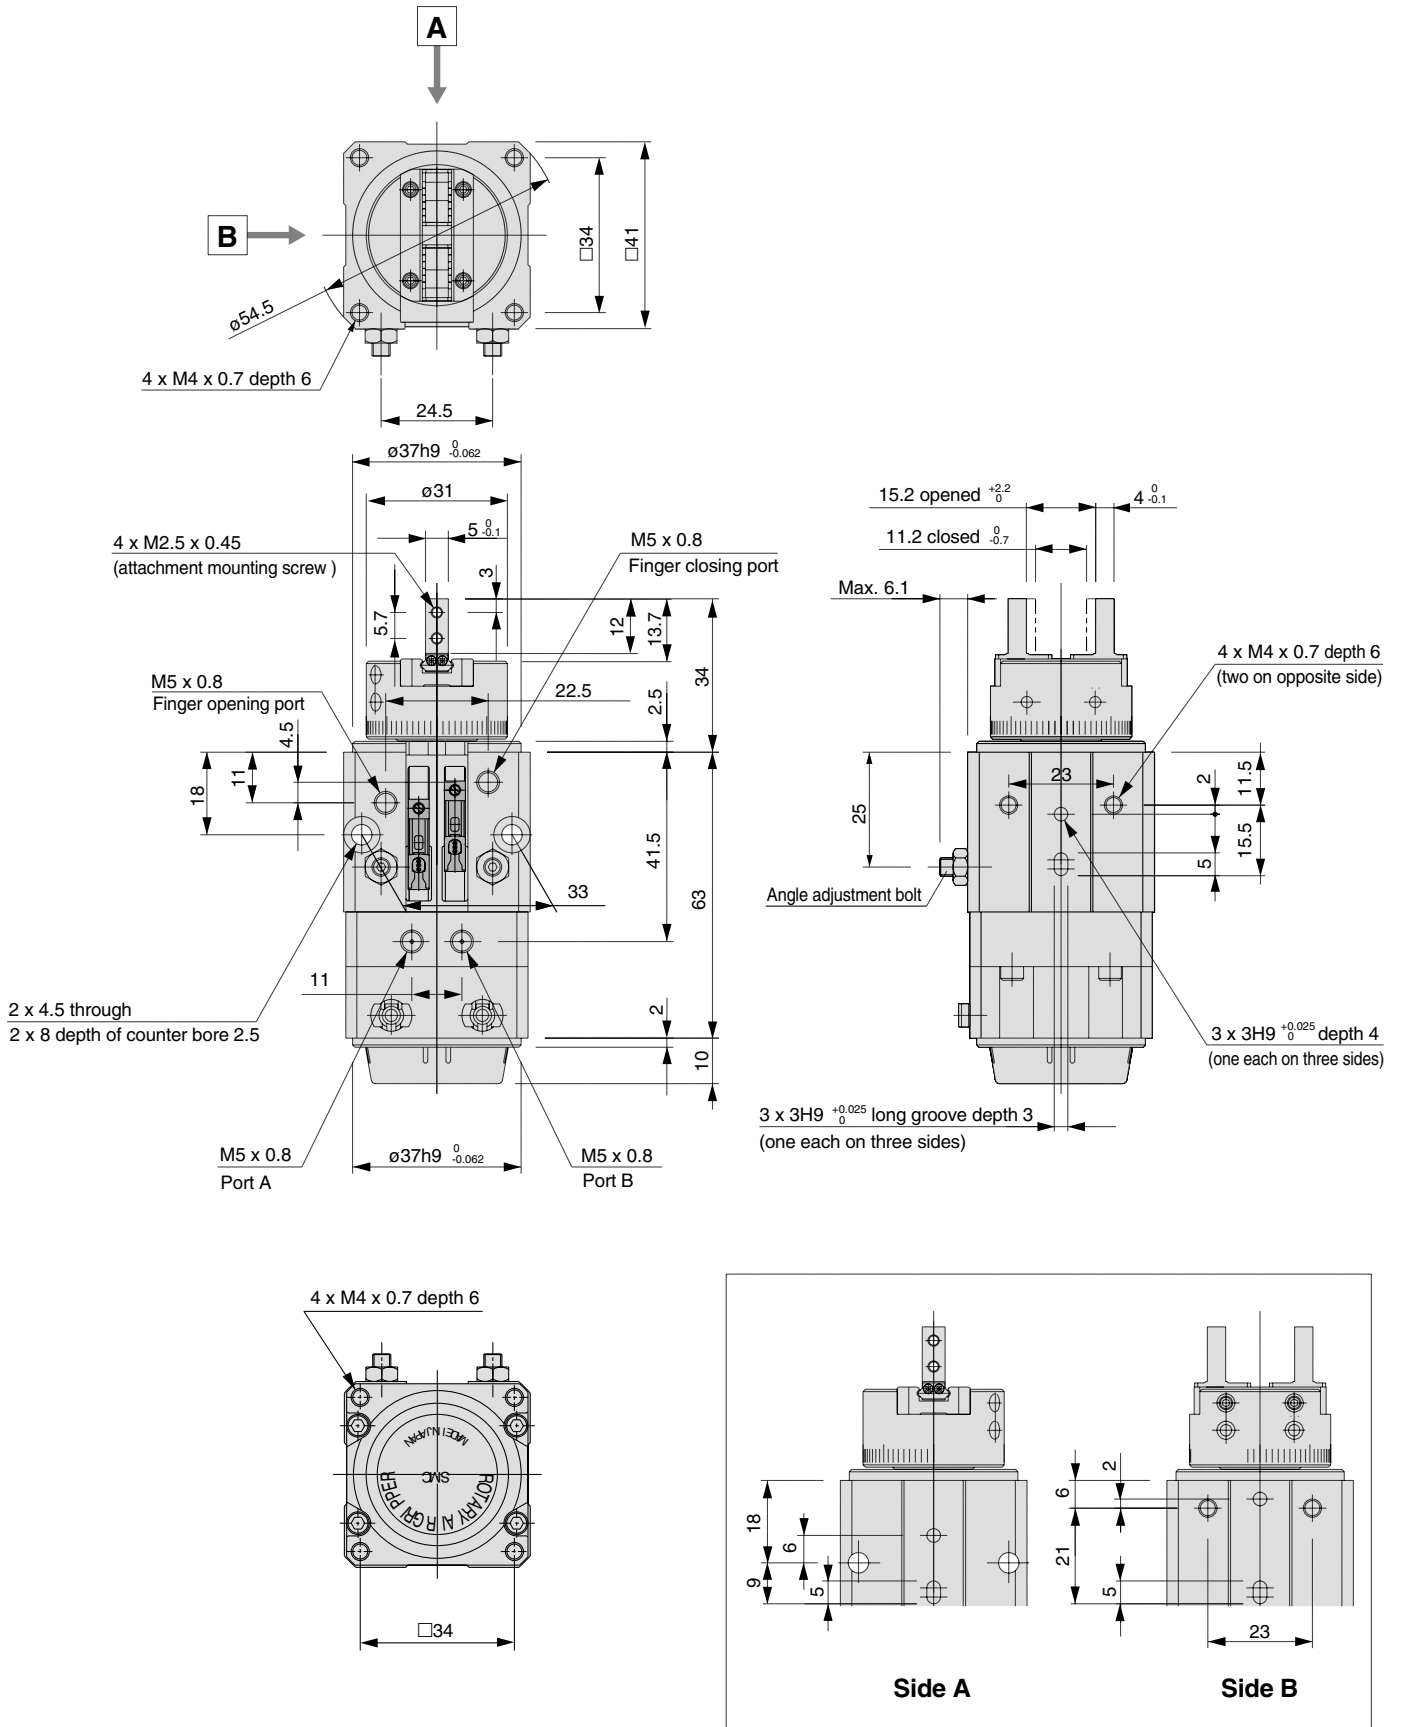

Dimensions

MRHQ16

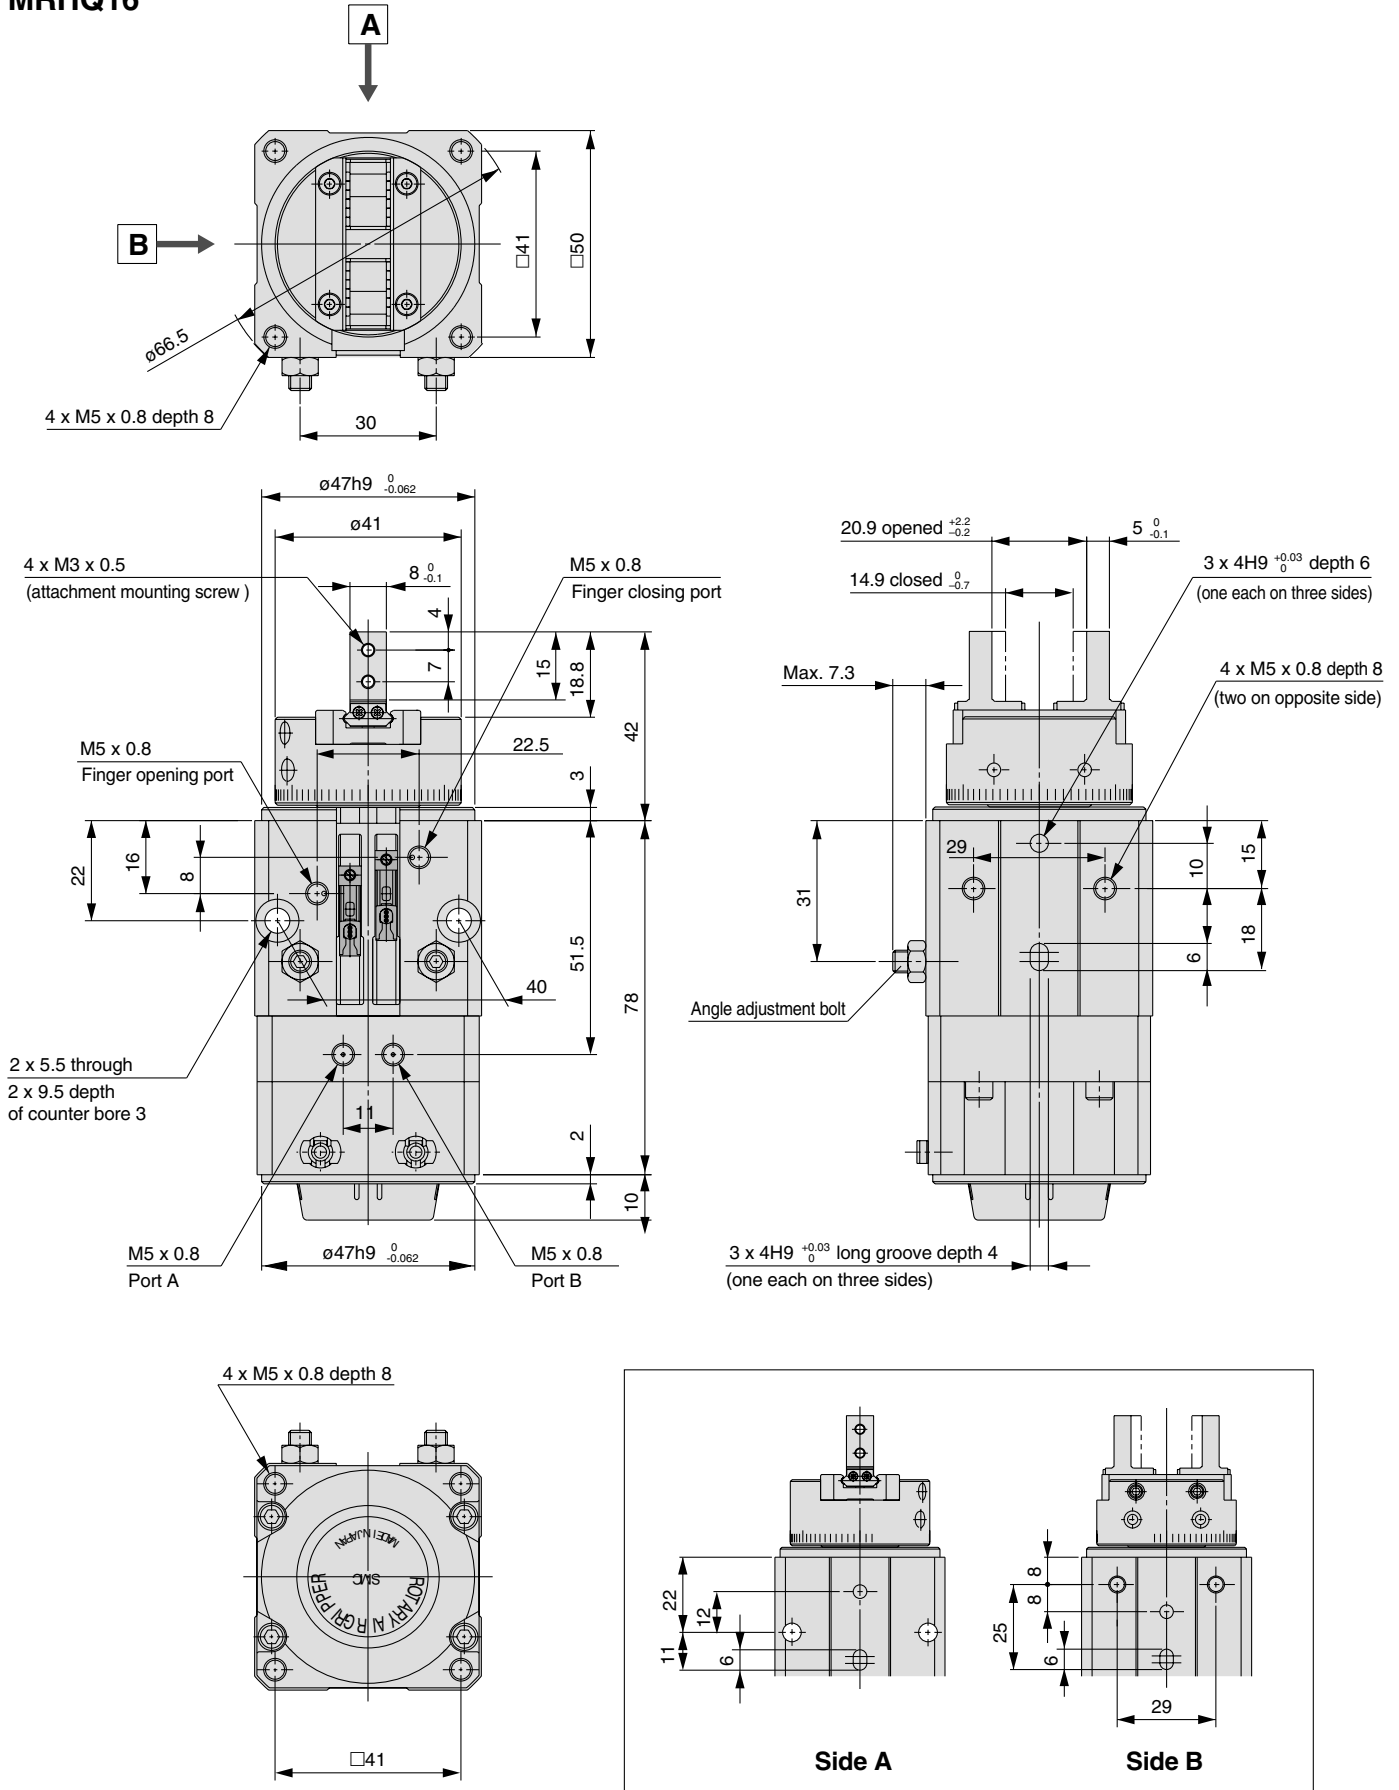

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ





MA

D-□

Series MRHQ


Dimensions

MRHQ20

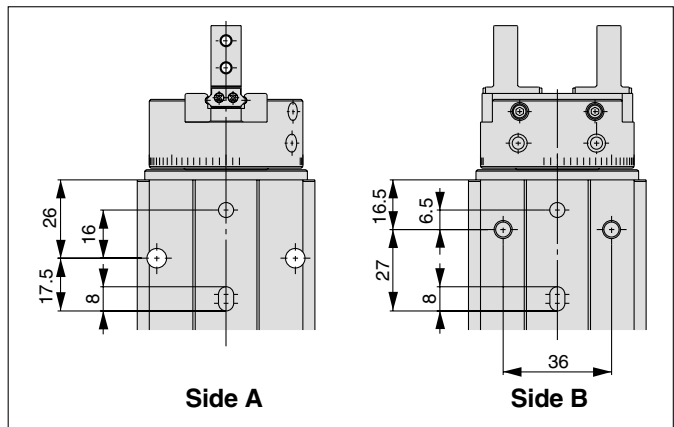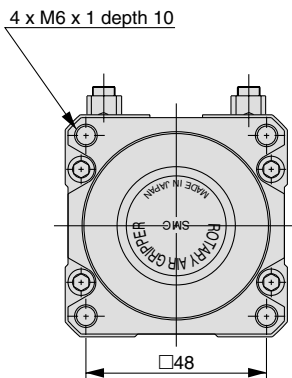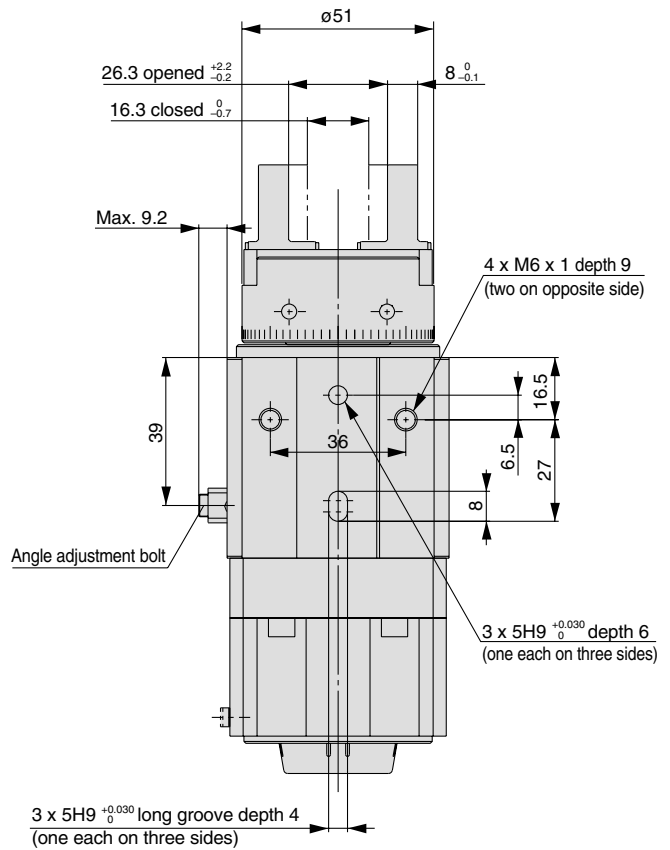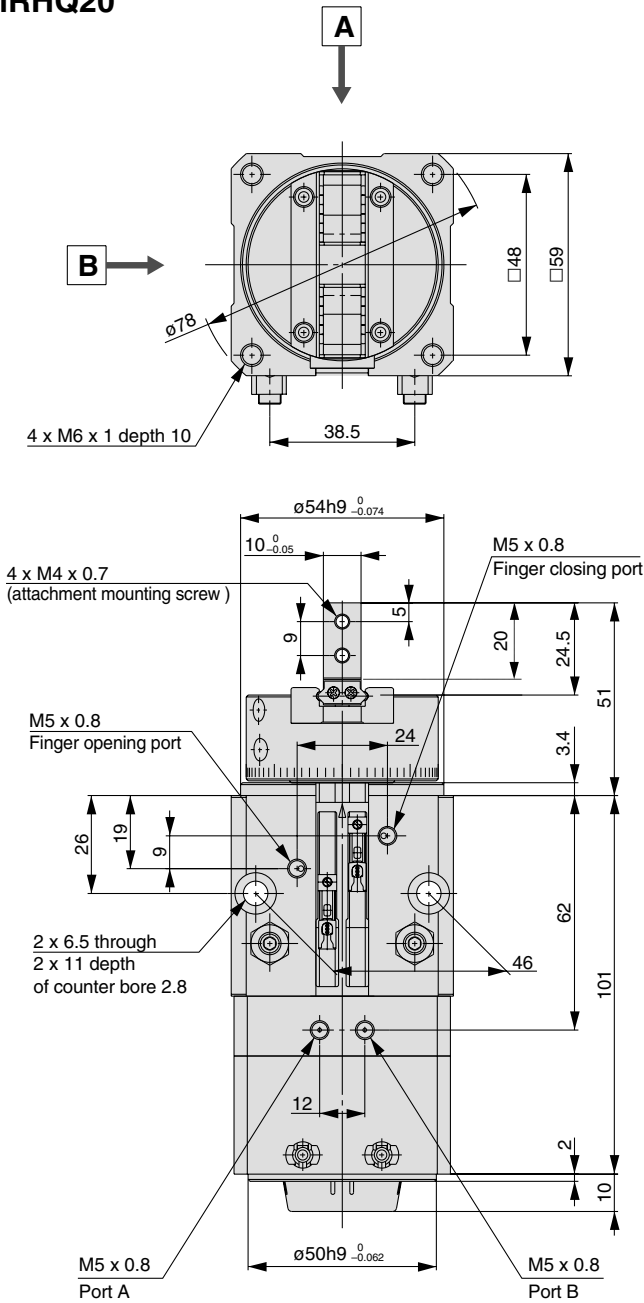

Dimensions

MRHQ25

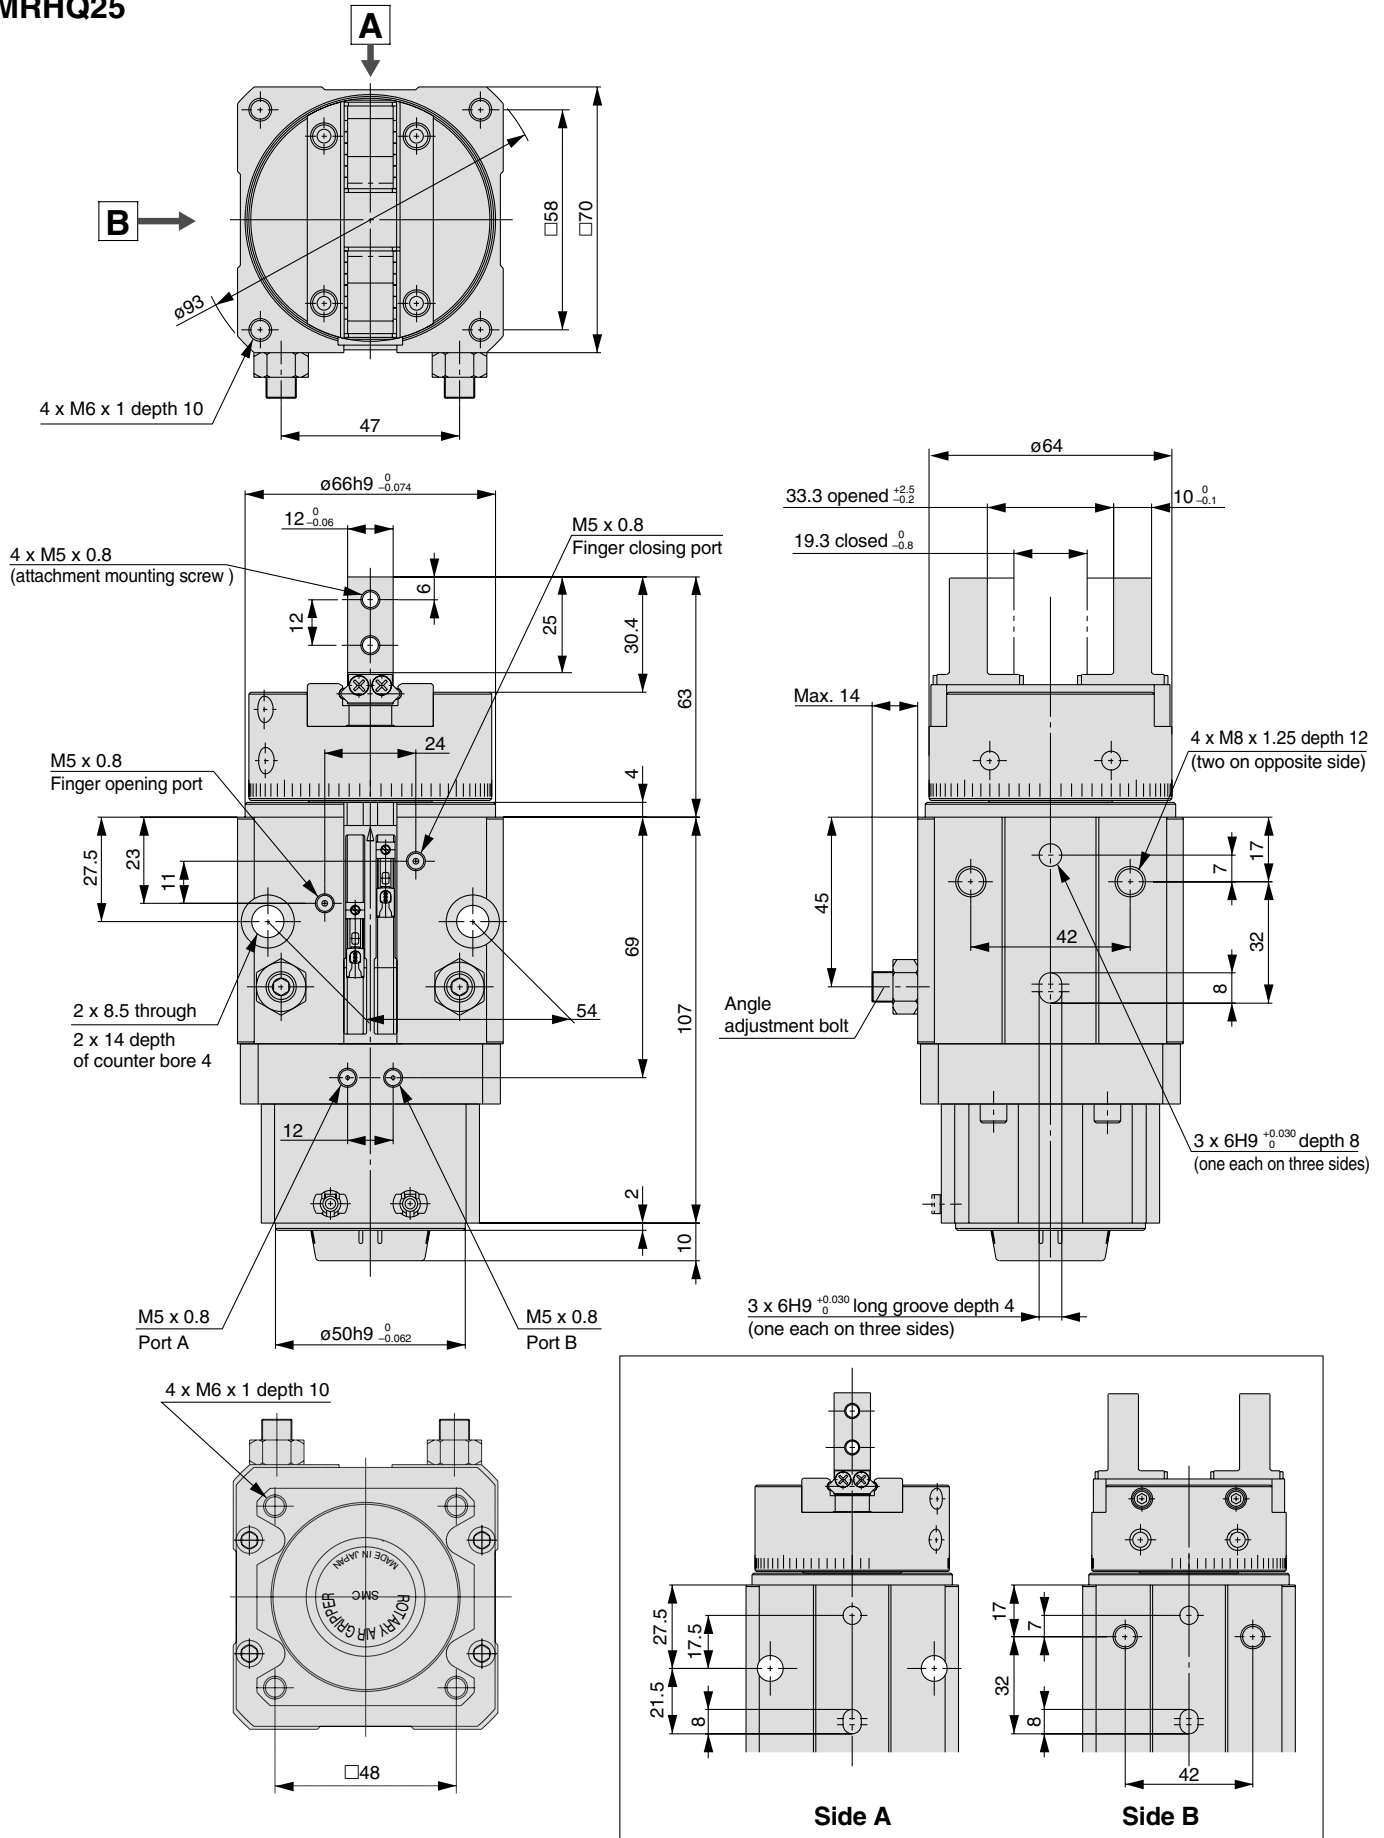

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ

MA

D-□

Auto Switch Specifications



Applicable Series

Series	Application	Auto switch model		Electrical entry
MRHQ10 MRHQ16 MRHQ20 MRHQ25	Gripper opening/ closing verification	Solid state	D-M9BV	Grommet/2-wire
			D-M9NV,M9PV	Grommet/3-wire
	Rotation verification	Solid state	D-M9B-746	Grommet/2-wire
			D-M9N-746,M9P-746	Grommet/3-wire

Auto Switch Hysteresis

Auto switches have hysteresis similar to micro switches. Use the table below as a guide when adjusting auto switch positions, etc.


Model	Hysteresis (mm)
MRHQ10	0.5
MRHQ16	0.5
MRHQ20	1.0
MRHQ25	1.0

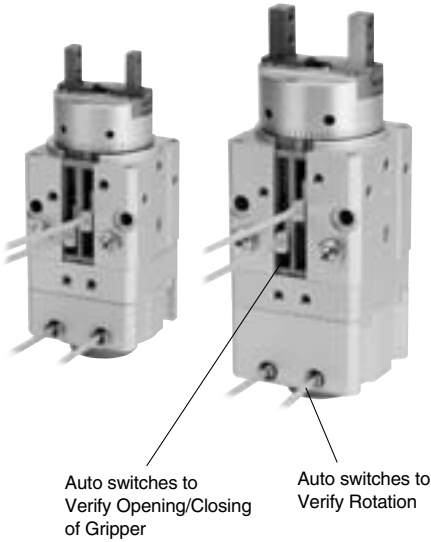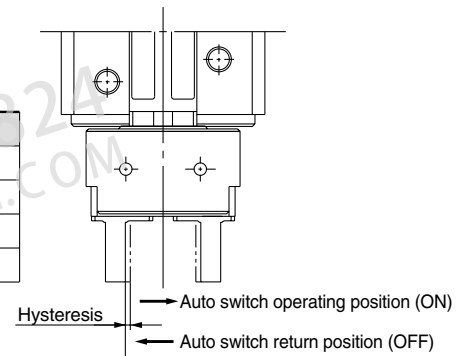


Mounting of Auto Switch

Mounting Auto Switches to Verify Rotation


1. First, remove the slotted set screw installed in a standard switch.

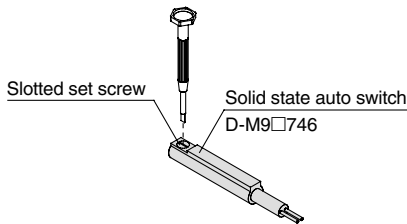

2. Insert the auto switch into the switch case, and install switch holder B into the first groove (MRHQ20/25) or the second groove (MRHQ10/16) and secure the auto switch.

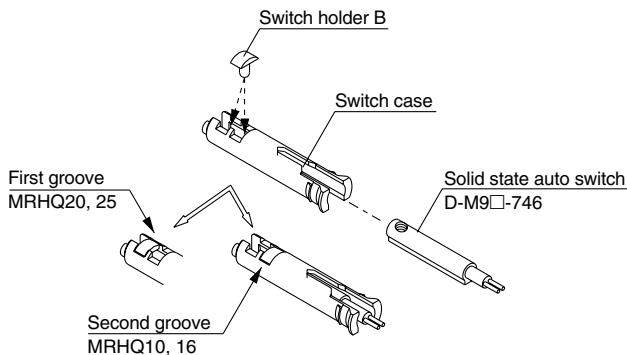

3. Install the auto switch case, with a switch attached securely in the hole, in the direction indicated in Figure (1).

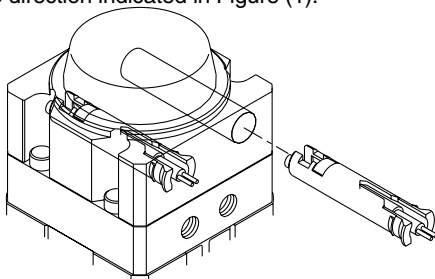

Mounting Auto Switches to Verify Opening/Closing of Gripper

1. Position switch holder A in the groove of the switch guide in the direction indicated in Figure (2).
2. Insert an auto switch into the switch guide and align the set screw with the hole of switch holder A.

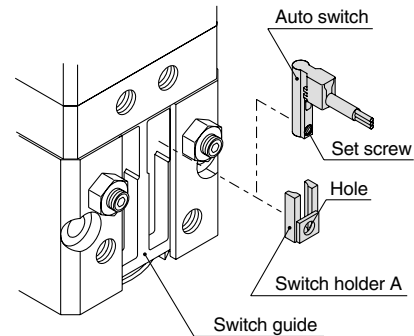


Figure (2)

3. Secure the auto switch at an appropriate position with a flat head watchmakers screwdriver as indicated in Figure (3).

Tightening torque: **0.05 to 0.1 N·m**

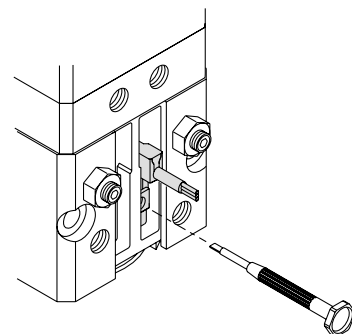


Figure (3)



Grommet

- Reduce the 2-wire load current (2.5 to 40 mA)
- Use a flexible cord as a standard



Auto switch for rotation confirmation

Auto Switch Specifications

PLC: Programmable Logic Controller

D-M9□□-746 (With indicator light)			
Auto switch part no.	D-M9N-746	D-M9P-746	D-M9B-746
Electrical entry	Lateral	Lateral	Lateral
Wiring type	3-wire		2-wire
Output type	NPN Type	PNP Type	—
Applicable load	IC circuit, Relay, for PLC		24 VDC relay, for PLC
Power supply	5, 12, 24 VDC(4.5 to 28V)		
Current consumption	10mA or less		
Load voltage	28 VDC or less	—	24 VDC(10 to 28 VDC)
Load current	40mA or less		2.5 to 40mA
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA)		4V or less
Leakage current	100 μA or less at 24 VDC		0.8mA or less
Indicator light	Red LED illuminates when turned ON.		
Standard	CE marking		


- Lead wire: Oilproof heavy-duty vinyl cord
2.7 x 3.2 ellipse, 0.15mm², 2 cores(D-M9B), 3 cores(D-M9N, D-M9P)
- Lead length symbols: 0.5m (Example)D-M9N-746
3 m (Example)D-M9NL-746
5 m (Example)D-M9NZ-746

Auto Switch Mass

Unit: g


Auto switch part no.	D-M9N-746	D-M9P-746	D-M9B-746
Lead wire length m	0.5	8	7
	3	41	38
	5	68	63

Auto Switch Internal Circuit

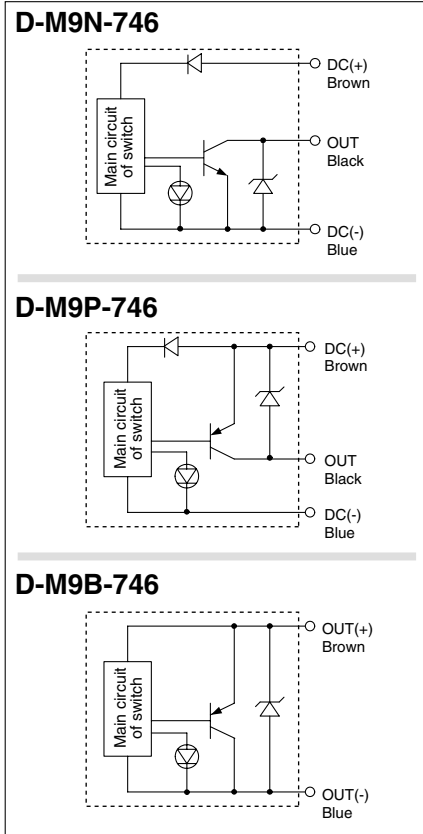

Auto Switch Dimensions

D-M9N-746/D-M9P-746/D-M9B-746

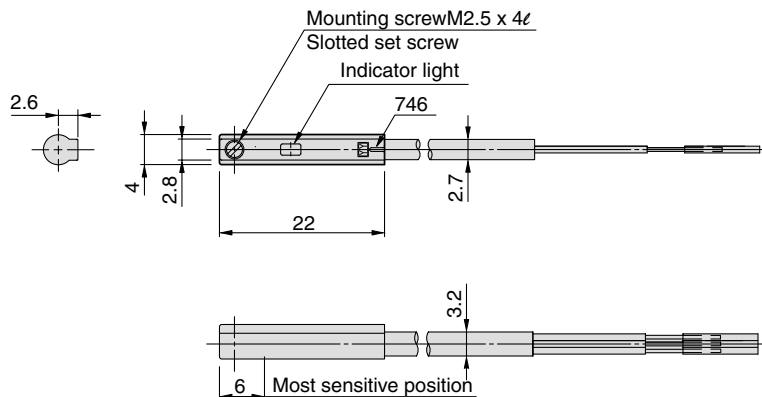












- MHZ
- MHF
- MHL
- MHR
- MHK
- MHS
- MHC
- MHT
- MHY
- MHW
- X□
- MRHQ
- MA
- D-□

Series MRHQ

Auto Switch Installation Examples and Mounting Positions

Various auto switch applications will be available with combinations of using different numbers of auto switches and varieties of detecting positions.










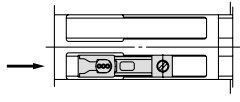
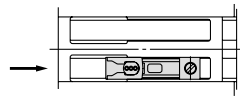
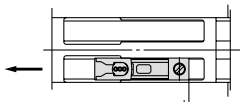
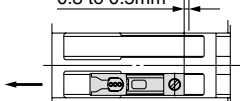
1) Detection when Gripping Exterior of Workpiece

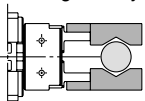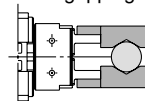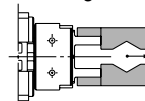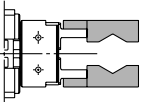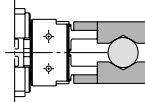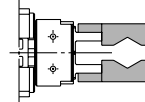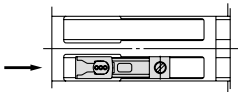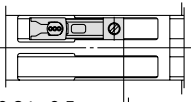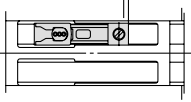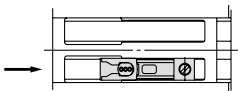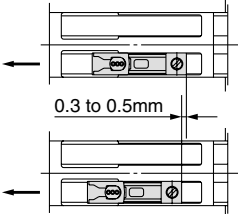Detection example		1. Confirmation of fingers in reset position	2. Confirmation of workpiece held	3. Confirmation of workpiece released
Position to be detected		Position of fingers fully opened 	Position when gripping a workpiece 	Position of fingers fully closed 
Operation of auto switch		Auto switch turned ON when fingers return. (Light ON)	Auto switch turned ON when gripping a workpiece. (Light ON)	When a workpiece is held (Normal operation): Auto switch to turn OFF (Light not illuminating) When a workpiece is not held (Abnormal operation): Auto switch to turn ON (Light illuminating)
Detection combinations	One auto switch	●	●	●
	Two auto switches	●—————●		●
		●—————●		●
How to determine auto switch installation position		Step 1) Fully open the fingers. 	Step 1) Position fingers for gripping a workpiece. 	Step 1) Fully close the fingers. 
At no pressure or low pressure, connect the auto switch to a power supply, and follow the directions.		Step 2) Refer to "Mounting Switches to Verify Opening/Closing of Gripper" on page 730 and position an auto switch in auto switch mounting groove.		
		Step 3) Slide the auto switch in the direction of the arrow until the indicator light illuminates.	Step 3) Slide the auto switch in the direction of the arrow until the light illuminates and fasten it at a position 0.3 to 0.5 mm in the direction of the arrow beyond the position where the indicator light illuminates.	
				
		Step 4) Slide the auto switch further in the direction of the arrow until the indicator light goes out.		
				

Note) • It is recommended that gripping of a workpiece be performed close to the center of the finger stroke.
• When holding a workpiece close at the end of open/close stroke of fingers, detecting performance of the combinations listed in the above table may be limited, depending on the hysteresis of an auto switch, etc.

Various auto switch applications will be available with combinations of using different numbers of auto switches and varieties of detecting positions.

2) Detection when Gripping Interior of Workpiece

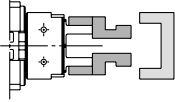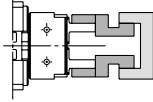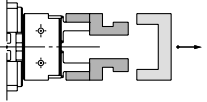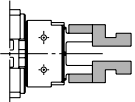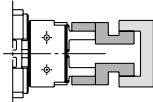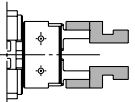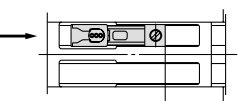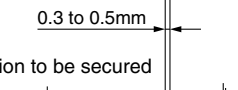Detection example		1. Confirmation of fingers in reset position	2. Confirmation of workpiece held	3. Confirmation of workpiece released
Position to be detected		Position of fingers fully closed 	Position when gripping workpiece 	Position of fingers fully opened 
Operation of auto switch		Auto switch turned ON when fingers return. (Light ON)	Auto switch turned ON when gripping a workpiece. (Light ON)	When a workpiece is held (Normal operation): Auto switch to turn OFF (Light not illuminating) When a workpiece is not held (Abnormal operation): Auto switch to turn ON (Light illuminating)
Detection combinations	One auto switch	●	●	●
	Two auto switches	●	●	●
How to determine auto switch installation position		Step 1) Fully close the fingers. 	Step 1) Position fingers for gripping a workpiece. 	Step 1) Fully open the fingers. 
At no pressure or low pressure, connect the switch to a power supply, and follow the directions.		Step 2) Refer to "Mounting Switches to Verify Opening/Closing of Gripper" on page 730 and position auto switch in switch mounting groove.		
		<p>Step 3) Move the auto switch in the direction of the arrow and fasten it at a position 0.3 to 0.5 mm beyond the position where the indicator light illuminates.</p>  <p>Position where light turns ON</p>  <p>0.3 to 0.5mm</p> <p>Position to be secured</p> 	<p>Step 3) Slide the auto switch in the direction of the arrow until the indicator light illuminates.</p>  <p>Step 4) Slide the auto switch in the direction of the arrow until the indicator light goes out.</p>  <p>Step 5) Move the auto switch in the opposite direction, and fasten it at a position 0.3 to 0.5 mm in the direction of the arrow beyond the position where the indicator light illuminates.</p>  <p>0.3 to 0.5mm</p> 	

- MHZ
- MHF
- MHL
- MHR
- MHK
- MHS
- MHC
- MHT
- MHY
- MHW
- X□
- MRHQ**
- MA
- D-□

Note) • It is recommended that gripping of a workpiece be performed close to the center of the finger stroke.
• When holding a workpiece close at the end of open/close stroke of fingers, detecting performance of the combinations listed in the above table may be limited, depending on the hysteresis of an auto switch, etc.



Series MRHQ Specific Product Precautions 1

Be sure to read before handling. Refer to front matters 38 and 39 for Safety Instructions and pages 358 to 365 for Rotary Actuator, Air Gripper and Auto Switch Precautions.

Selection

⚠ Warning

1. Keep the load energy within the product's allowable energy value.

Operation with a load kinetic energy exceeding the allowable value can cause human injury and/or damage to equipment or machinery. (Refer to "Model Section" procedures in this catalog.)

⚠ Caution

1. When there are load fluctuations, allow a sufficient margin in the actuator torque.

In the case of horizontal mounting (operation with product facing sideways), malfunction may occur due to load fluctuations.

Mounting

⚠ Caution

1. Adjust the rotation angle within the prescribed ranges: $90^\circ \pm 10^\circ$; $180^\circ \pm 10^\circ$ ($\pm 5^\circ$ at end of rotation).

Adjustment outside the prescribed ranges may cause malfunction of the product or failure of switches to operate.

2. Adjust the opening/closing speed of the fingers with a speed controller so that they do not operate any faster than necessary.

When fingers open and close faster than necessary, impact on the fingers and other parts increases, causing poor repeatability when gripping workpieces and danger of an adverse effect on the product's life.

Adjustment of Finger Opening/Closing Speed

Double acting	Install two speed controllers and adjust with meter-out throttling.
Single acting	Install one speed controller and adjust with meter-in throttling. For external gripping – connect to closing port For internal gripping – connect to opening port

3. Adjust the rotation time within the prescribed values using a speed controller. (0.07 to 0.3 s/90°)

Adjustment to a speed slower than 0.3 s/90° can cause sticking and slipping or stopping of operation.


Maintenance

⚠ Caution

1. Gripper unit

Replace a gripper unit. When replacing it follow the gripper unit replacement procedures on the next page. Confirm the correct unit part number.

Gripper unit

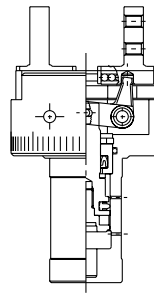


Model	Unit part no.
MRHQ10D	P407090-3D
MRHQ10S	P407090-3S
MRHQ10C	P407090-3C
MRHQ16D	P407060-3D
MRHQ16S	P407060-3S
MRHQ16C	P407060-3C
MRHQ20D	P407080-3D
MRHQ20S	P407080-3S
MRHQ20C	P407080-3C
MRHQ25D	P408080-3D
MRHQ25S	P408080-3S
MRHQ25C	P408080-3C

* A gripper unit includes not only an air gripper, but also three O-rings (12) and three hexagon socket head cap screws (15) as shown in the construction on page 725.

2. Rotary unit

Replace a rotary unit.

Rotary unit

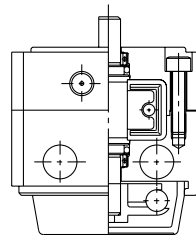

Model	Unit part no.
MRHQ10□- 90S	P406090-2A
MRHQ10□-180S	P406090-2B
MRHQ16□- 90S	P406060-2A
MRHQ16□-180S	P406060-2B
MRHQ20□- 90S	P407080-2A
MRHQ20□-180S	P407080-2B
MRHQ25□- 90S	P408080-2A
MRHQ25□-180S	P408080-2B

* Note that the rotation angle cannot be changed even though the rotary unit has been changed.

For maintenance, order units with a part number suitable for the model being used.

3. O-ring in the body C

((12) O-ring in the construction on page 725: 3 pcs.)

Model	Seal kit part no.
MRHQ10□	MRHQ10S-PS
MRHQ16□	MRHQ16S-PS
MRHQ20□	MRHQ20S-PS
MRHQ25□	MRHQ25S-PS

* Special grease is applied.

* This O-ring is included in the gripper unit.




Series MRHQ Specific Product Precautions 2

Be sure to read before handling. Refer to front matters 38 and 39 for Safety Instructions and pages 358 to 365 for Rotary Actuator, Air Gripper and Auto Switch Precautions.

Maintenance

⚠ Caution Gripper Unit Replacement Procedure

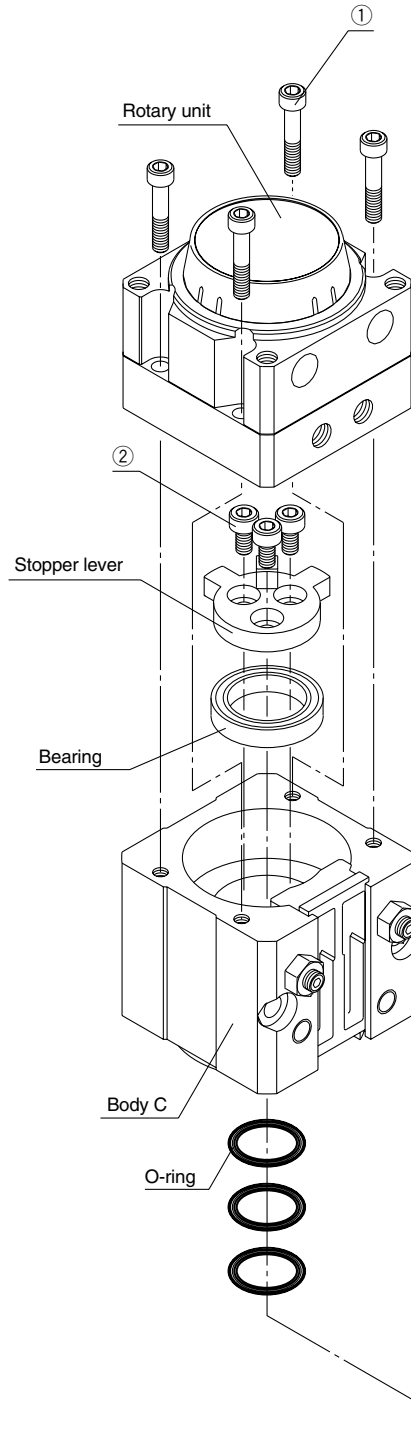

1. Loosen the four bolts ① and remove the rotary unit.
2. Loosen the three bolts ②, remove the stopper lever and pull out the gripper unit.
3. Replace the three O-rings inside body C.
4. Reinstall the two bearings securely in their original positions.
5. Insert a new gripper unit into body C. Then reinstall the stopper lever and parallel pin in their original positions and secure in place by tightening with the three bolts ②.
6. Reinstall the rotary unit in its original position and secure in place by tightening with the four bolts ①.

Model	Tightening torque N·m	
	①	②
MRHQ10	0.9 to 1.2	1.4 to 1.7
MRHQ16	2.5 to 3.0	3.2 to 3.7
MRHQ20	4.5 to 5.0	6.5 to 7.0
MRHQ25	4.5 to 5.0	10.0 to 10.5

MHZ

MHF

MHL

MHR

MHK

MHS

MHC

MHT

MHY

MHW

-X□

MRHQ

MA

D-□

SANPUM

为高端制造业提供一流的工业产品

SANPUM

深圳市三浦贸易有限公司

地址：深圳市南山区南海大道海王大厦A座19E

电话：86-755-23881000

传真：86-755-23881777

邮箱：info@sanpum.com



4008 824 824
WWW.SANPUM.COM